

the Ultra Luxe™ Heated Throw

Instruction Book - LHT339



Breville®



Contents

- 2 Breville Recommends Safety First
- 8 Components
- 9 Controller
- 10 Operation
- 13 Care, Cleaning & Storage
- 14 Troubleshooting



Limited Product Warranty

Breville's warranty for this product covers the repair or replacement if it's found to be defective due to faulty materials, workmanship, or function within the warranty period. All legal warranty rights under applicable national legislation will be respected and will not be impaired by our warranty. For details on length of warranty, to obtain a printed copy or to read full terms and conditions please scan the QR code or

visit www.breville.com

Alternatively, call the Breville Service Centre (see back cover for contact details).



QR149

BREVILLE RECOMMENDS SAFETY FIRST

At Breville we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind.

In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

IMPORTANT SAFEGUARDS READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Carefully read all instructions before operating the Breville Heated Throw and save for future reference.
- Remove any packaging material and promotional stickers before using the heated throw for the first time.

- Use the heated throw only with the detachable controller provided. Refer to the markings on the controller for the model of the controller.
- Do not pull the heated throw by the flexible cord or use the cord to carry the heated throw.
- Not recommended for futons or similar folding bedding systems.
- Do not attempt to expose the internal wires.
- Prolonged use at one time at a high setting can result in heat stroke, skin irritation or burns.
- Do not use the heated throw on areas of sensitive skin or areas insensitive to burns.
- This throw must not be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating.
- Children under the age of three are not to use this heating throw due to their inability to react to overheating.
- Only for human use.
- The heated throw is not to be used by young children over the age of three unless the controls have been pre-set by a parent or guardian, and unless the child has been adequately instructed on how to operate the controls safely.
- The heated throw is not to be used on or by an invalid, a sleeping or unconscious person, or a person with poor blood circulation unless carefully attended.
- This heated throw is to be used as a wrap only.
- This heated throw is not an under-blanket.
- This heated throw is for domestic use only. Not intended for medical use in hospitals.
- Do not use this heated throw for anything other than its intended use. Do not use outdoors.

- Avoid sharp objects. Do not insert pins or any sharp objects into the heated throw as they may damage the electrical wiring.
- Do not use the heated throw when folded, rucked, creased or rolled.
- Do not use with wires tucked in.
- Do not sit on, or use, if damaged in any way.
- Keep the controller away from an open window.
- Be sure that this heated throw is used only on an alternating current supply circuit of correct voltage.
- Be sure that the heated throw is always installed so that the flexible supply plug is adjacent and accessible to the main power outlet.
- Do not use the heated throw if it is wet or moist. Allow to fully dry before operating.
- Do not use under clothing, wraps or blankets.
- Do not use the heated throw as an under blanket, it is not designed for all-night use.
- This heated throw must not be used over or under a waterbed.
- Do not fall asleep when using the heated throw. This product is not intended for use while sleeping.
- Turn the heated throw off, switch off at the power outlet and remove the power plug from the outlet when the heated throw is not in use or before storing.
- Do not dry clean the heated throw. Dry cleaning may have a detrimental effect on the heated throw. Follow the instructions in the Care, Cleaning and Storage section when cleaning and storing.
- Do not iron the heated throw.
- Do not bleach the heated throw.

- Regularly inspect the heated throw, power supply cord, plug and controller/s for any wear, damage or misuse. If signs of these are detected, immediately cease use of the heated throw and return the entire unit to your nearest Breville Service Centre for examination, replacement or repair.
- It is recommended that a qualified and registered person inspect your heated throw after every 3 years of use.
- Allow the heated throw to cool down before folding and storing.
- When storing, fold neatly, but not tightly, (or roll) without sharp bends in the heating element and store where no other objects will be placed upon it.
- Do not place any items on top of the heated throw when storing to avoid creasing.
- There are no customer serviceable parts inside. The heated throw is fitted with a specially designed controller and no attempt should be made to repair it or to replace the protective fuse. Have the heated throw serviced only by a qualified service agent at your nearest Breville Service Centre.
- If any abnormality or defect in operation of this heated throw is observed, discontinue its use immediately and a Breville Service Centre.



NOTE

The controller must be fitted correctly to operate the heated throw. The connector fitting is purposely designed to only fit into the inlet from one direction. If there is a gap, or the connector does not fit properly into the inlet, do not force. Remove and try the other side.










IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before use.
- Connect only to a 230V or 240V power outlet.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid or allow moisture to come in contact with the part, unless it is recommended in the cleaning instructions.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard, do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.


Misuse may cause injury.

- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- Always turn the appliance OFF, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance OFF, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.

- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.

	Very mild washing, maximum 30°C
	Wash by hand
	Drop the electric blanket across a clothes line and drip dry
	Not to be used by very young children (0-3 years)
	Detach controller before cleaning
	Do not tumble dry
	Do not dryclean
	Do not bleach
	Do not iron

**FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS**

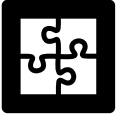

Components




1. 1400x1700mm Reversible Heated Throw: Ultraplush Fleece (Grey)
2. Detachable Digital Controller with LED Display

Not Shown:

- Flexible heating wire
- Safety overheat protection
- Power cord & plug

Controller

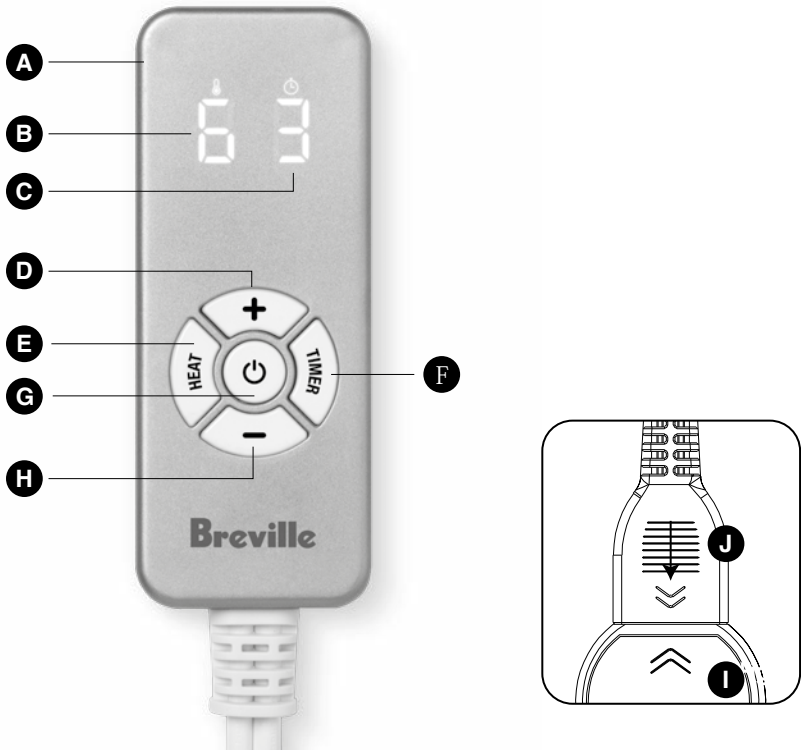

- A.** Detachable controller
- B.** LED heat display: displays heat setting
- C.** LED timer display: displays timer setting
- D.** Plus button: press to increase heat/timer setting
- E.** Heat button: press to program heat setting (1-6)
- F.** Timer button: press to program timer setting (1-6 hrs)

- G.** Power button: press and hold for 3 seconds to turn throw on/off
- H.** Minus button: press to decrease heat/timer setting
- I.** Controller Inlet: attached to the heated throw
- J.** Connector: attaches to the inlet to connect the controller to the heated throw



Operation

BEFORE FIRST USE


Remove any promotional material and packaging from the heated throw. Ensure all parts are included as per the components section in this booklet.

TO CONNECT THE CONTROLLER

To connect, ensure the heated throw controller is not connected to a 230V or 240V power supply.

Using the arrows on both parts as a guide, insert the controller connector into the inlet located on the heated throw.

Ensure that the connector is securely fastened in the inlet so there is no gap between the two. (Fig. 1)

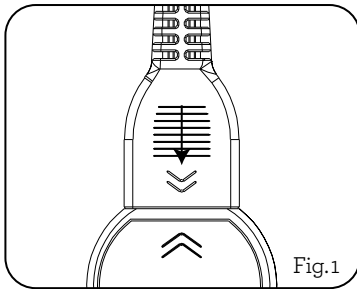

NOTE

The connector is purposely designed to only fit into the inlet from one direction. If there is a gap, or the connector does not fit properly into the inlet, do not force. Remove and try the other side.

Insert the power plug into a 230V or 240V grounded outlet and switch on at the power outlet. Press and hold the Power button for 3 seconds to turn on the controller.

The default Heat setting 4 and default time of 3 hours will illuminate on the LED display, flash 3 times, then automatically commence heating and counting down.

If the LED screen displays 'F1', this is an indication that the connector may have a loose connection.


To correct, press and hold the Power button on the controller for 3 seconds to turn off, and then turn the power off at the outlet. Disconnect and reconnect the connector into the inlet, ensuring a correct fit.

TO DETACH THE CONTROLLER

The heated throw comes with a detachable controller which must be removed when laundering the throw or while storing when not in season.

Press and hold the Power button for 3 seconds to turn the controller off, then disconnect the controller from the power outlet.

Pull the connector out of the inlet to separate. (Fig. 2)

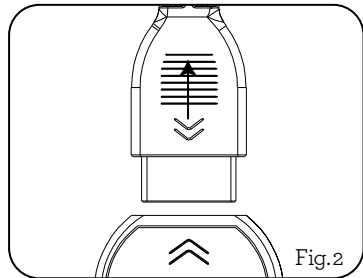

DEFAULT & MEMORY SETTINGS

When first turned on, or when turned on after disconnecting from the power supply, the heated throw digital controller will display a default Heat setting of 4 and a Timer default setting of 3 hours.

The heated throw also has a memory function which will display the last programmed Heat and Timer setting used unless the throw is disconnected from the power supply.

OPERATING YOUR HEATED THROW

Your Breville heated throw's digital controller has 6 programmable Heat settings to allow you to choose your own level of heating comfort, and a programmable Timer between 1 to 6 hours to automatically turn off the heated throw when the set time has elapsed.

- Connect the controller to the throw.
- Plug the power cord into a 230V or 240V power outlet and turn on at the power outlet.
- Press and hold the Power button for 3 seconds to turn on the controller. The LED screen will illuminate and the default Heat setting of '4' and Timer hours of '3' will flash three times, and then heating and the countdown will commence.
- After 10 seconds if no buttons are pressed, the display screen will dim. Press any button while operating to illuminate the display and check settings.
- Once the set time has counted down, the heated throw will stop operating and the controller display will go into standby mode showing '—'.
- Press and hold the Power button for 3 seconds to turn off the controller or follow the steps found in this booklet to program new Heat and Timer settings.

NOTE

This heated throw has a memory function which will recognise the last set heat and timer setting unless the throw is disconnected from the power supply.

NOTE

If no buttons are pressed after 10 seconds, the controller LED display will dim. Press any button to reactivate the display to view settings.

NOTE

When first used or after disconnecting from a power supply, the heated throw will display a heating default setting of 4 and a timer default setting of 3 hours.

ADJUSTING THE HEAT SETTING

The Breville heated throw has a heat setting range of 1 to 6. This is displayed on the left side of the LED display.

- Press the Heat button; the heat symbol will illuminate, and the heat number will start to flash.
- Press the + or - buttons until the desired heat setting displays on screen. The chosen number will flash 3 times then illuminate solid, and the throw will commence heating.

NOTE

If the Heat setting is not adjusted, the default heat setting of 4 will display, or the last used heat setting (if the throw has not been unplugged since last use) will set automatically.

NOTE

Do not leave the heated throw in contact with the skin for excessive periods of time. For continuous use, it is recommended that the lowest heat setting should be used.

NOTE

To assist fast heat up, it is recommended to start on a higher heat setting, than adjust the heat setting to your preferred comfort level.



ADJUSTING THE AUTO-OFF

TIMER

The Breville heated throw has a programmable auto-off Timer. The Timer can be programmed from 1 to 6 hours to automatically turn off the heated throw. This is displayed on the right side of the LED display.

- Press the Timer button; the timer symbol will illuminate, and the timer number will start to flash.
- Press the + or - buttons until the desired auto-off time is displayed on screen. The chosen number will flash 3 times then illuminate solid, and the throw will commence heating as the timer will start to countdown in 1-hour increments.



NOTE

If the Timer is not adjusted, the default time of 3 hours will display, or the last time set (if the throw has not been unplugged since last use) will set automatically.



NOTE

Do not leave the heated throw in contact with the skin for excessive periods of time. For continuous use, it is recommended that the lowest Heat Setting should be used.



Care, Cleaning & Storage

DO NOT DRY CLEAN. DO NOT IRON.

Use only the following instructions when cleaning the heated throw:

Before cleaning, ensure that any controller is unplugged from the power supply and detached from the throw.

SPOT CLEANING

- Sponge the affected area using a lukewarm neutral detergent or mild soapy solution.
- Follow this with sponging, using a clean water solution.
- Remove any excess water by compressing the wet area between absorbent towels.

HAND WASHING

- Immerse the heated throw with controllers removed in a soapy solution of lukewarm water and mild, neutral detergent.
- Soak for five minutes then gently squeeze the solution through the throw.
- Rinse thoroughly in clean, lukewarm water, then gently squeeze any excess water from the heated throw.



WARNING

The controller must be removed from the heated throw before washing.



WARNING

Never immerse the detachable controller in water or any other liquid.



WARNING

DO NOT tumble dry.

MACHINE WASHING

The heated throw can be washed in a domestic washing machine (size permitting) or by a commercial laundry.

To wash your throw in a domestic washing machine, wash on the WOOL or DELICATES setting using a neutral wool detergent or mild soapy solution.

- DO NOT wash on a HOT cycle, the temperature must be kept below 30 °C.
- Do NOT use high speed or extra spin cycles.
- Do NOT machine wash with the controller connected to the throw.



IMPORTANT

Ensure the throw is completely dry after cleaning and before using.

DRYING

- Drape the heated throw across a clothes line and drip dry.
- DO NOT use pegs to secure the heated throw in position.
- DO NOT dry with a hair dryer or heater.
- DO NOT twist or wring dry.
- DO NOT tumble dry the heated throw as it may damage the internal heating wires.
- DO NOT use moth ball or sprays.

STORAGE

When storing the heated throw, allow it to cool down before folding.

DO NOT store the heated throw when wet.

Detach the controller from the throw before storing.

Store in a cool, clean and dry location.

Fold neatly, but not tightly, (or roll) without sharp bends in the heating element and store where no other objects will be placed upon it.

DO NOT place any items on top of the heated throw when storing to avoid creasing.

Store in a safe place where it will remain dry and clean.



Troubleshooting

Possible Problem	Possible Causes	What to Do
F1 displays on screen	<ul style="list-style-type: none">• The controller is not properly connected to the heated throw.	<ul style="list-style-type: none">• Disconnect the controller and reconnect to the heated throw.
F2 displays on screen	<ul style="list-style-type: none">• Heating wire has short-circuited.	<ul style="list-style-type: none">• Switch the throw off and contact the Breville customer service centre.
F3 displays on screen	<ul style="list-style-type: none">• The heating wire has disconnected.	<ul style="list-style-type: none">• Switch the throw off and contact the Breville customer service centre.
F4 / F5 displays on screen	<ul style="list-style-type: none">• Component short circuit due to lightning strike or high current	<ul style="list-style-type: none">• Switch the throw off and contact the Breville customer service centre.
F6 displays on screen	<ul style="list-style-type: none">• The controller temperature sensor has been damaged	<ul style="list-style-type: none">• Switch the throw off and contact the Breville customer service centre.
F7 displays on screen	<ul style="list-style-type: none">• Issue with the electricity supply.	<ul style="list-style-type: none">• Switch the throw off and wait until the electricity is stable again before switching the throw back on.



Notes

Breville Customer Service Centre

Australian Customers

Phone: 1300 139 798

Web: www.breville.com.au

New Zealand Customers

Phone: 0800 273 845

Web: www.breville.co.nz

Breville®

Master Every Moment™

Ultra Luxe, Breville & the Breville logo trademarks of Breville Pty. Ltd. A.B.N. 98 000 092 928.
Copyright Breville Pty. Ltd. 2024.

Due to continued product improvement, the products illustrated/photographed
in this brochure may vary slightly from the actual product.

LHT339 ANZ-D25