the Luxe Brewer™ Glass & Thermal

Instruction Book – BDC415 & BDC465



BDC415



BDC465

Breville®

Contents

Limited Product Warranty	2
Breville® Recommends Safety First	2
Important Safeguards	2
Components	7
Accessories	8
Features	9
Assembly	10
Operation	11
Settings	15
Tips	17
Care & Cleaning	19
Troubleshooting	21

LIMITED PRODUCT WARRANTY

Breville's warranty for this product covers the repair or replacement if it's found to be defective due to faulty materials, workmanship, or function within the warranty period. All legal warranty rights under applicable national legislation will be respected and will not be impaired by our warranty. For details on length of warranty, to obtain a printed copy or to read full terms and conditions please scan the QR code or visit www.breville.com. Alternatively, call the Breville Service Centre (see back cover for contact details).

QR149

BREVILLE® RECOMMENDS SAFETY FIRST

At Breville we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition, we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

IMPORTANT SAFEGUARDS

Read all instructions before use and save for future reference.

- Remove and safely discard any packaging material, plastic power plug cover, and any removable labels before using appliance.
- Ensure the product is properly assembled before use and fully unwind the power cord before operating.
- If the appliance is to be left unattended, cleaned, moved,

assembled or stored, unplug the unit from the power outlet.

- Always operate the appliance on a stable and heat resistant surface.
- Do not place the appliance on or near a hot gas burner, electric element or where it could touch a heated oven.
- Ensure the unit has at least 10 cm (4 inches) of clearance from all side panels.
- Do not operate the appliance without water in the water tank. Use only cold, preferably filtered water. Do not fill the appliance with any other liquids for brewing operations.
- We recommend using cold, filtered water. We do not recommend the use of de-mineralized or distilled water as this may affect the taste of brewed coffee.
- Ensure the supplied mesh basket filter or a paper filter (8-12 cup, flat base basket style with 8.25 cm (3 1/4 inches base) is placed in the coffee basket before using the appliance. Do not use the mesh basket filter in conjunction with a paper filter.
- Before starting a brew cycle:
  - Check that the carafe drip stop moves up and down freely.
  - Completely empty the carafe and securely lock the carafe lid in place.
  - Insert and seat the carafe under the drip stop.
  - Ensure the filter basket is empty and properly fit in place.
- During a brew cycle:
  - Do not remove the carafe or remove the filter basket while the unit is in a brew cycle. Failure to follow the above may lead to scalding or serious injury.
  - Some surfaces may be hot, use caution when touching or lifting the unit or accessories.
  - Scalding may occur if the carafe lid or basket is removed during the brewing cycle.

⚠ CAUTION

Risk of injury. Proper installation or removal of basket is required to reduce the risk of splashing of hot water.

- Always ensure the carafe lid is securely locked in place

onto the carafe before pouring.

- Do not use a cracked container or a container having a loose or weakened handle.
- Always wait until the machine has cooled before removing the brew basket.
- Do not touch hot surfaces. Use the handle for lifting and carrying the carafe.
- Do not set a hot carafe on a wet, cold or heat sensitive surface.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- The carafe is designed for use with this appliance only. It must never be used on a range top or in a microwave.
- The use of accessory attachments not recommended by Breville may result in fire, electric shock, or injury to persons.
- Proper installation of filter basket, shower-head seal and shower-head locking ring is required to reduce the risk of splashing of hot water.

⚠ CAUTION

To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

- Do not use harsh or abrasive materials when cleaning any part of this appliance such as steel wool or scouring pads.
- The heating element surface is subject to residual heat after use.
- The appliance shall not be placed in a cabinet when in use.
- Improper use of the appliance, incorrectly operated, or unprofessionally repaired will void any warranty.
- Servicing other than cleaning should be performed by an authorized service representative or at an authorized Breville Service Centre.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Do not let the cord hang over the edge of a bench or table, touch hot surfaces, or become knotted.
- Do not leave the appliance unattended when in use.
- Children should be supervised to ensure they do not play with the appliance.
- Close supervision is necessary when the appliance is used by or near children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- This appliance is recommended for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- Regularly inspect the supply cord, plug and actual appliance for any damage. If found damaged in any way, immediately cease use of the appliance and return the entire appliance to the nearest authorised Breville Service Centre for examination, replacement or repair.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA

be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.


- The appliance is not intended to be operated by means of an external timer or separate remote-control system.



To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid.


FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS


COMPONENTS

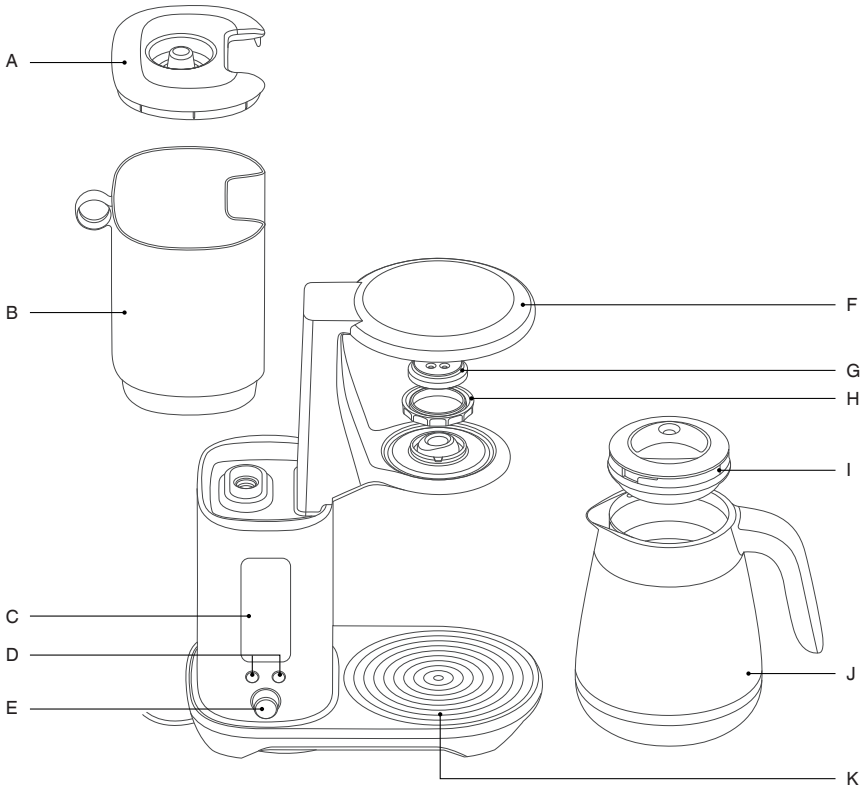



A. Water tank lid
B. Water tank
C. LCD display
D. Settings button
Delayed Auto Start button
E. SELECT dial
F. Showerhead
G. Showerhead screen
H. Showerhead ring
I. Carafe lid
J. Carafe
K. Hot plate (BDC415 only)


ACCESSORIES

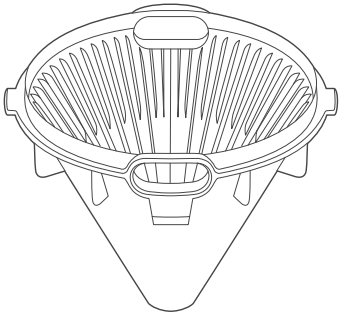


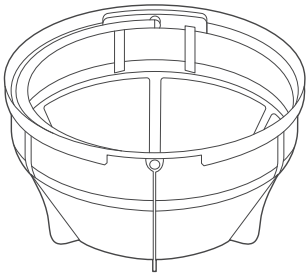

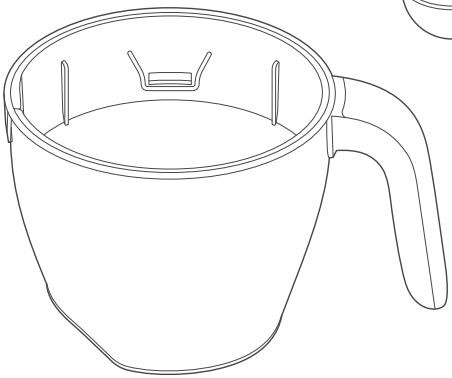

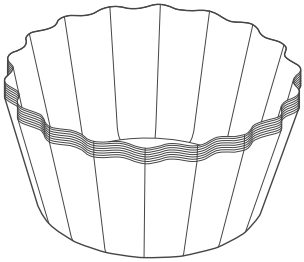





1. Cone filter basket insert
2. Mesh basket filter
3. Brew basket
4. Flat bottom basket filter paper pack (10 pieces)
5. Water hardness strip
6. Coffee measuring scoop

FEATURES

This Brewer has been designed to make any style of coffee of the highest quality.

BREW

Brew up to 12 cups (1.8L) rapidly as the brewer delivers water from the tank. For a bolder brew, increase the amount of ground coffee used.

COLD BREW

Brew up to 4 cups (600 ml) of cold brew coffee with the flexibility to adjust steeping time between 30 minutes to 36 hours.

KEEP WARM (applies only to BDC415)

Integrated heater plate will keep your brew hotter for longer in the glass carafe.

CUSTOM

Fine-tune bloom volume, bloom time, brew temperature and flow rate to create the perfect coffee for every taste.

DELAYED AUTO START

Set the machine to automatically start brewing at a preset time.

FILTER CHANGE (filter is optional and is sold separately)

Changing the water filter depends on the water hardness that the machine is using. For water hardness level 1, it is recommended to change the filter after 160 cycles.

DESCALE

After regular use, hard water can cause mineral buildup in internal components, leading to reduced brewing flow, brew temperature, machine power, and coffee taste. It is recommended to descale regularly.

SOUND

The machine will beep to confirm the changes. Adjust the volume between LOW, Med, HIGH, and OFF.

ASSEMBLY

NOTE

Hot brewed coffee is made by combining hot water with ground coffee beans. Water temperature is important in the brewing process as it affects the rate of extraction. Extraction refers to the flavours and substances dissolved from the ground coffee. The hotter the water, the quicker it is to extract compounds, such as oil, acids, and caffeine.

Remove and discard all labels and packaging materials attached to the machine. Make sure to remove all parts and accessories from the box before discarding the packaging.


Take a soft cloth and firmly wipe the exterior stainless steel housing. Wash the lid, brew basket, cone filter basket insert, mesh basket filter, and carafe in warm, soapy water. Avoid using abrasive cleansers, pads, or cloths that can scratch the surface. Rinse and dry everything thoroughly. Lastly, firmly press the carafe drip stop to ensure it moves up and down freely.

WATER HARDNESS SETTING & FLUSHING

1. Ensure that the empty coffee basket and empty carafe (with carafe lid) are inserted into the machine.
2. Fill the water tank with fresh cold water up to the Carafe Max mark. Plug the machine into the power outlet.
3. Upon turning on the machine, the display will show 'SET HARDNESS.' Dip the water hardness test strip into a cup of the same water from the tank for 1 second. Wait for one minute to determine the water hardness level. Rotate the SELECT dial to choose the water hardness level based on the number of bars shown on the strip, then press the dial. The machine will beep to confirm the changes.

NOTE

If the result on the strip shows 4 or 5 bars, switch to a different water source. Using filtered water will prolong the life of the water filter, extend descaling intervals, and improve the taste. Be sure to test the water hardness of the alternative water source and adjust the machine settings accordingly.

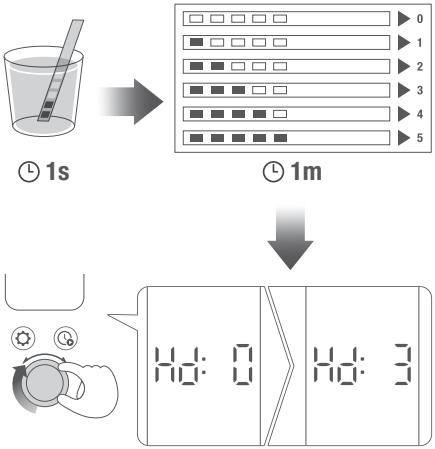

4. The machine will display 2:00 min. Press the dial once and the machine will instantaneously run a flush cycle. The machine will dispense all the water from the tank, through the system, and into the empty carafe. After flushing, the machine will beep once. Empty the basket and carafe.

SETTING THE TIME AND TEMPERATURE UNITS

After the flushing cycle, the machine will beep 3 times and the LCD will display the Time setting. The hour will blink first for setting. Use the SELECT dial to set the hour and press the dial to save the changes. Set the minutes by using the SELECT dial and press the dial to save the changes. Next, the LCD will display the temperature unit for setting. Use the SELECT dial to choose the temperature unit and press the dial to save the changes. The machine will beep once and display the brew modes, indicating that it's ready for brewing.

HEATING PLATE (applies only to BDC415)

Following the brewing cycle, the machine activates the keep warm function to maintain the coffee at an optimal serving temperature within the carafe. The heater plate duration can be adjusted in the settings.

NOTES

- The keep warm function is not activated during Single Serve brew.
- To activate the keep warm function after a Single Serve brew, push the settings button, select keep warm and hold down the dial to activate.

CAUTION


DO NOT touch the heating plate when in use, as it is very hot.

OPERATION

BREWING USING THE CARAFE


When using a carafe for brewing, make sure that the brew basket is clean and that the drip stop seal at the bottom of the basket is also clean and free of coffee particles.

1. Depending on the amount of coffee to brew, select the appropriate basket and filter. For brewing between 2 and 8 cups, use the cone-shaped filter basket insert with a paper filter (Note: cone-shaped paper filter is not included). For brewing more than 8 cups, use a mesh basket filter or a flat bottom brew basket with a large paper filter.

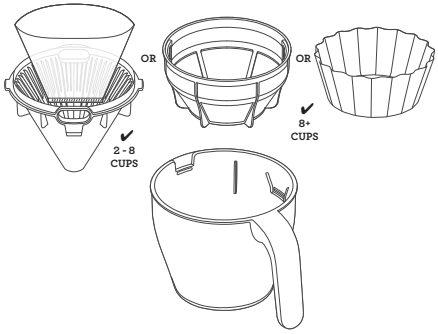

CAUTION

Filling the basket without a mesh basket filter or filter paper may cause the basket to overflow during the brewing cycle.

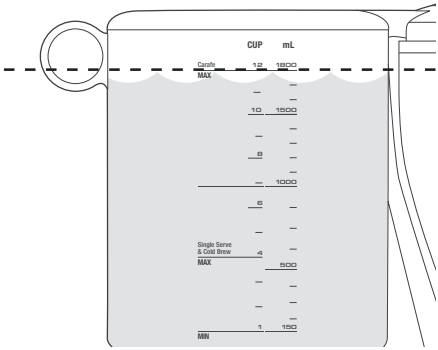

2. Fill the water tank with fresh cold water up to the marking on the water tank, depending on

the amount of coffee to brew. (Note: Refer to the indication on the water tank)

NOTE


This machine will brew all the water in the tank. Ensure the tank does not contain an excess amount of water.

3. For the very best tasting coffee, we recommend using freshly roasted whole bean coffee and grind with a burr grinder directly before you brew. The grind should be medium/coarse, never use coffee ground for espresso as your coffee basket may overflow.
4. Grind enough coffee beans for the volume you're making. For a full 1.8L carafe, we recommend 99g of coffee, approximately 12 level measuring scoops.
   Roughly 1 scoop for every 150ml.
5. Insert the correct filter paper, cone or flat bottom, or mesh basket, into the brew basket, then, add your ground coffee. Insert the brew basket into the machine.

NOTES

- Never use both mesh basket filter and paper filter at the same time.
- Coffee with superior taste & clarity will come from using a paper filter.
- The mesh basket filter will allow some fine coffee grounds to brew into the coffee. This will appear as sediment in the cup or carafe. This is normal. Only use the mesh basket filter provided as others may cause the machine to overflow.

6. Lock the carafe lid and place the carafe under the drip stop outlet.

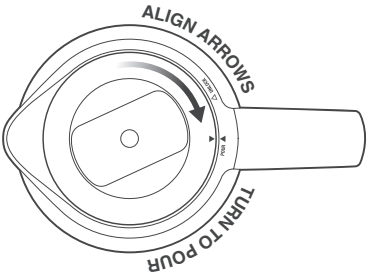

CAUTION

The carafe MUST be in place before you brew with water level higher than 'SINGLE CUP' line. Otherwise the coffee basket will overflow.

NOTES

- Always ensure your carafe is clean and empty before brewing. Residual coffee will affect the taste and liquid in the carafe will cause it to overflow.
- Always ensure your carafe is EMPTY before brewing to prevent overflow.

7. Rotate the dial and select BREW from the LCD and press the dial once. The machine will display the progress of the brewing cycle.
8. When the coffee is ready, the machine will beep once and will automatically switch to KEEP WARM mode.

NOTES

- A small amount of water remains in the tank after brewing. This is part of the normal operation.
- Never fill the water tank once the coffee machine has started a brewing cycle.

MODEL BDC415:

- The machine goes into standby mode if not used for 6 minutes. Power consumption on standby mode does not exceed 0,30 W.

MODEL BDC465:

- The machine goes into standby mode if not used for 5 minutes. Power consumption on standby mode does not exceed 0,30 W.

HOW TO MAKE COLD BREW

Cold brew coffee is brewed differently than traditional hot brew coffee. It uses cold water (not hot water). The brewer uses the 'full immersion' method of brewing cold brew which steeps the water and coffee together over an extended duration; typically 4 to 14 hours. This method creates an intense smooth coffee with little bitterness.
Brew ratios are also different and much higher than normal. Breville recommends a brew ratio 2 to 3 times higher than average,

approximately 3 scoops to every 150 mL of water.

This Breville brewer will produce a maximum of 600 mL of Cold Brew. Due to the long duration (typically 4-14 hours) of the brewing process we recommend setting the machine up overnight so the Cold Brew will be ready in the morning.

1. Fill the tank with your desired volume of water ensuring this is below the COLD BREW line or up to the COLD BREW MAX LINE (4 cups / 600 mL).

NOTES

If water in the water tank is more than 600 mL or above the COLD BREW MAX LINE, the Cold Brew selection will not be available in the screen menu.

2. Remove the basket, and ensure both the cone insert and mesh basket filter are removed. Add a large paper filter and then add ground coffee at 2-3 times of regular ratio (approximately 12 scoops for 600 mL).
3. Reinsert the basket into the machine.
4. Remove the lid from the carafe.
5. Insert the carafe without the lid. The lid must not be on the carafe during the brewing process, alternatively, use another vessel.
6. Navigate to the COLD BREW setting and press the dial once. The machine will then begin brewing the water without the heating element. Once this is complete a countdown timer will display on the LCD indicating when the Cold Brew is finished. At this point the machine will automatically dispense the Cold Brew into the waiting carafe.

NOTES


- Brew Time for Cold Brew can easily be adjusted to your preference, anywhere between 30 min – 36hrs.
- DO NOT add ice to the tank. Cold, chilled water should be added.
- Ensure the carafe lid is removed for Cold Brew mode.

HOW TO BREW USING SINGLE CUP / SMALLER VOLUMES (LESS THAN 4 CUPS, 500-600 ML)

NOTE

When brewing a single serve coffee on the BDC415, the warming plate will not activate for this size unless manually activated after brewing.

1. The machine will recognize when the brewer has 500-600mL of water and will adjust the brew settings, automatically, to make the best possible tasting coffee.
   Fill your cup with fresh cold water and then pour it into the water tank, ensuring the water level stays below the single serve line.

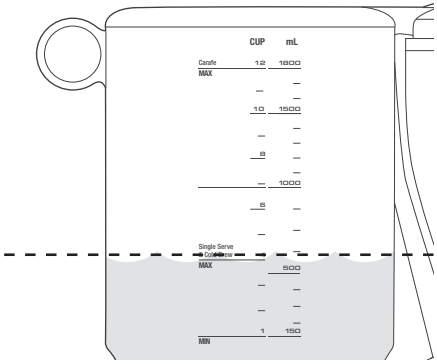

NOTES

- DO NOT fill the water tank more than the 'Single Serve' line or the volume of the cup used to receive the coffee. It will overflow as the machine brews until the water tank becomes empty.
- When brewing single serve coffee the LCD will display "REMOVE CARAFE LID". This is to prevent the drip stop to engage, allowing coffee to extract the full flavor for a single serve.

2. Position your empty cup or the carafe without the lid underneath the brew basket outlet.
3. Grind the appropriate amount of whole bean coffee to match the water level in the tank. 1 level scoop of ground coffee is suitable for 150 ml of water.

NOTE

When brewing smaller volumes, use the cone filter basket insert to ensure proper contact between the brew water and the ground coffee.

4. Place the cone filter basket into the brew basket using the alignment marks as a guide.
5. Insert a cone-shaped paper filter into the cone filter basket, and then add the ground coffee.
6. Insert the brew basket into the machine.
7. Turn the dial to select BREW mode.
8. Press the dial to start brewing.

NOTE

It will take approximately 4 minutes to brew before the coffee pours into the cup.

9. Once the coffee is ready, the machine will release steam and the LCD will display the brewing modes menu.

USING DELAYED AUTO START

Here are the steps for setting up the machine to automatically start brewing at a preset time:

1. Fill the water tank with fresh cold water equal to the amount of coffee.
2. Grind the correct amount of whole bean coffee. Use one scoop of ground coffee for 150 mL of water.
3. Select the appropriate filter basket and paper filter.
4. Insert the filter basket into the brew basket, using the alignment marks as a guide.
5. Put the paper filter into the filter basket, and add the ground coffee.

NOTE

Never use both mesh basket filter and paper filter at the same time.

6. Insert the brew basket into the machine.
7. Place the carafe with the lid into the machine.
8. Press the DELAYED AUTO START button. The LCD will display the blinking hours setting.
9. Rotate the SELECT dial to set the desired time to start the brewing cycle, then press the dial to save the settings. The machine will beep once to confirm the changes.

NOTE

If the clock hasn't been set, the machine will keep blinking after pressing the DELAYED AUTO START button and won't beep to confirm changes using the SELECT dial. Make sure the clock is set before using the DELAYED AUTO START function. The clock will reset every time the unit is unplugged.

10. Rotate the SELECT dial to choose the brewing mode, and the machine will automatically start brewing at the set time.

NOTES

- The LCD will display the set time until the machine automatically starts brewing.
- Pressing the DELAYED AUTO START button will cancel Auto Start. The clock function is intended solely for the Delayed Auto Start feature. The unit does not display the current time continuously like a standard clock. This is normal operation. When daylight saving time begins or ends, you must manually reset the clock on the unit.

SETTINGS

NOTE

The LCD is on settings mode if the settings icon ☼ is visible on the top most part of the LCD.



11. Press the ☼ settings button
12. Rotate the dial to navigate through the menu on the LCD and press the dial once to select.

- **COLD BREW**
- **CUSTOM**
- **FILTER CHANGE**
- **DESCALE**
- **CLOCK SETTING**
- **BEEP VOLUME SETTING**

NOTE

Press the settings button again to go back to the main menu.

SETTING COLD BREW

1. When the COLD BREW is highlighted, press the dial once to select and begin customizing the COLD BREW option.
2. The time in hour is blinking and ready to set by rotating the dial to the left to go less and rotate the dial to the right to add more and press the dial once to select and set the hour.

NOTE

Cold brew defaults to 24hours, but it can be set further when the dial is turned to the right. The maximum steep time for cold brew is 36 hours.

3. The minute is blinking and ready to set by rotating the dial to the left to go less and rotate the dial to the right to set up to 59 min and press the dial once to select and set the minute.
4. The time is set for cold brewing.
5. The LCD will return to the main menu.

SETTING CUSTOM OPTION

When the CUSTOM is highlighted on the LCD, press the dial once to select and the custom options will be visible on the LCD.

Rotate the dial and press once to select the option to customize.

The following options can be customized:

BLOOM VOL: Adjust the amount of water dispensed before the blooming starts.

BLOOM TIME: Coffee bloom occurs when hot water hits the ground coffee.

Recommended bloom time is 30-60 seconds. During this time the brewing cycle pauses to allow coffee to naturally bloom. See ‘TIPS’ for more about Bloom Time.

BREW TEMP: Adjust the temperature of the brew water being delivered to the ground coffee. See “TIPS” for more about setting brew water temperature.

FLOW RATE: Adjust brewing time to control contact time by adjusting the water delivery speed. Choose between Slow, Medium (default), and Fast.

WATER FILTER
(water filter is optional and is sold separately)

Rotate the dial to highlight the filter icon. When the filter icon is highlighted, press the dial once to select.

DESCALE

Rotate the dial to highlight the descale icon. When the descale icon is highlighted, press the dial once to select.

Refer to Care and Cleaning Section for descaling process.

SETTING THE CLOCK

Adjust the time displayed on the LCD.

Rotate the dial to highlight the clock icon. When the clock icon is highlighted, press the dial once to select.

1. The hour will blink first for setting. Use the SELECT dial to set the hour by rotating the dial to the left or right and press the dial to save the hour.
2. Next is to set the minutes, rotate the dial to the left or the right and press the dial to save the changes.
3. The LCD will return to the main menu.

SETTING THE SOUND VOLUME

Set the sound volume to LOW, MED, HIGH, or OFF.

Rotate the dial to highlight the sound icon. When the sound icon is highlighted, press the dial once to select.

1. Rotate the dial to the left or the right and the LCD will display, MEd, HIGH, OFF or LOW.
2. Press the dial once on your selected beep volume.
3. The LCD will return to the main menu.

TIPS

WHOLE BEANS

- FRESH IS BEST! Freshly roasted, quality coffee is key to making great tasting coffee. Peak flavour potential is 5-20 days after roast. Always look for a “Roasted On” date on the bag. Avoid coffee with a “Best Before” or “Use By” date as you never know when it was roasted.
- Coffee flavour and strength are a personal preference. Vary the type of coffee beans and the amount of ground coffee to achieve your preferred taste.
- Freshly ground beans are the key to making coffee with more flavour and body. Pre-ground coffee will have lost most of its flavour and aromatics, so always grind right before you brew for superior taste.
- Store coffee beans in a dark, cool and dry place. Vacuum seal if possible.
- Buy coffee beans in small batches to reduce the storage time and store no more than one week’s supply at any time.

PRE-GROUND COFFEE

- Pre-ground coffee is convenient, but will never taste as good as coffee ground right before you brew. We recommend investing in a quality burr grinder so you can grind fresh whole bean coffee right before you brew and enjoy superior tasting coffee.
- The grind will affect the rate at which the water flows through the coffee in the coffee basket and therefore the taste of the coffee. If the grind is too fine the water will not flow through the coffee and may clog or overflow the coffee basket. It may pass through the mesh basket filter leaving sediment in the cup or carafe. The resulting coffee will be over extracted, too dark and bitter. If the grind is too coarse the water will flow through the coffee too quickly. This will result in an under-extracted coffee lacking in flavour.
- Always use “drip filter grind” suitable for use with a drip coffee machines. Never use “Espresso grind” as the finer grind size may cause the coffee basket to block and will be over-extracted.

Blooming

- When coffee is roasted, CO_2 is trapped inside the bean. Coffee grounds release this CO_2 when hot water hits them, and this is called “blooming”. Your Brewer can automatically adjust bloom time by controlling the water flow. Blooming can have an impact on the aromas and flavours of the brewed cup. If the coffee is overly bitter shorten bloom time, and if it’s sour make it a little longer.

PRE-HEATING

- Pre-heat the carafe or cup for best results. A pre-heated carafe or cup will help maintain the coffee’s optimal temperature and keep coffee hotter for longer. Fill with hot water for about 30 seconds then discard the water.

WATER QUALITY

- Fresh, good-tasting water is essential for a perfect cup. If the water contains excessive sediment, or has an ‘off’ taste or odor, we recommend using filtered water.

COFFEE/WATER RATIO

We recommend 1 level Breville scoop of coffee grounds per 150ml cup of water. Adjust the amount according to your individual taste. The maximum capacity for pre-ground coffee is 12 level Breville scoops. Exceeding this amount may cause the coffee basket to overflow.

Cups of coffee (150ml cup)	Scoops of coffee grinds	Water amount
1	1 (8.25g)	150ml
2	2 (16.5g)	300ml
3	3 (24.75g)	450ml
4	4 (33g)	600ml
5	5 (41.25g)	750ml
6	6 (49.5g)	900ml
7	7 (57.75g)	1.05L
8	8 (66g)	1.2L
9	9 (74.25g)	1.35L
10	10 (82.5g)	1.5L
11	11 (90.75g)	1.65L
12	12 (99g)	1.8L

CARE & CLEANING

Always turn the coffee machine off and remove the plug from the power outlet before cleaning.

CLEANING THE OUTER HOUSING

The outer housing and LCD screen can be cleaned with a soft, damp cloth. Apply cleaner to the cloth and not the LCD surface. Polish with a soft, dry cloth. Cleaning and drying with dry paper towels or abrasive cloths and cleaners may scratch the surface.

CLEANING THE COFFEE BASKET AND MESH BASKET FILTER

Remove the coffee basket. Discard any ground coffee and filter paper. The coffee basket and mesh basket filter can be rinsed under running water. Ensure the fine holes of the mesh basket filter are clear. For a deeper clean, wash the coffee basket and mesh basket filter in warm, soapy water with a soft bristled brush.

CAUTION

The coffee basket, mesh basket or paper filter may still be very hot after brewing.
Use caution and allow to cool before removing.

CLEANING THE CARAFE

After each use, empty the carafe. Do not let brewed coffee stand overnight as this can cause the carafe to stain. Rinse the carafe and carafe lid under warm running water.
For a deeper clean, we recommend regularly washing the carafe in warm, soapy water using a soft bristled brush. Do not use abrasive cleansers, pads or cloths which can scratch the surface. Rinse and dry thoroughly.

CLEANING THE SHOWERHEAD

Simply wipe down the showerhead area periodically. However, if a more thorough clean is required, the Showerhead can be removed by unlocking the Showerhead Ring. Rotate clockwise then remove the Showerhead for cleaning. Once complete, reinstall the Showerhead.

DESCALING

After regular use, hard water can cause mineral build up in internal components, reducing the brewing flow, brewing temperature, power of the machine, and taste of the coffee. We recommend to descale regularly. When the LCD displays the descale icon and is flashing, the descaling cycle is needed.

NOTES

- Ensure that the water filter is removed from the water tank before descaling the machine.
- It takes approximately 30 minutes to complete descaling cycle.

1. Empty the water tank. Prepare the descale agent in accordance with the manufacturer's instructions. Pour the descale solution into the empty water tank and make sure descale solution is up to 1000 mL descale line on the tank.
2. Place the empty basket and the carafe into position under the drip stop outlet. (Ensure the carafe is empty and the lid is securely locked).
3. Press the settings button on the machine, then rotate the dial to highlight the descale icon. When the descale icon is highlighted, press the dial once to select this option. The LCD will display 30:00 min.
4. Press the dial once and the descale cycle will begin and the timer counting down is displayed on the LCD.
5. When the tank empties of the descale solution, the screen will flash FILL. Remove the tank from the machine and empty out any residual liquid and then re-fill the tank to the MAX line with fresh water to proceed with the rinse cycle.
6. When the descaling process is finished, the LCD screen will return to the main menu.

NOTE

Discard the water from the carafe and rinse thoroughly. Remove the water tank and completely remove the water from the tank and rinse thoroughly.

⚠ CAUTION

Water in the carafe may be hot, take caution and be careful when handling the carafe and discarding water from the carafe.

FACTORY RESET

To reset the machine to its factory settings, including water hardness setting. Hold the ☼ settings button and the Delayed Auto Start button together for 3 seconds. When SET HARDNESS is shown on the LCD, rotate the dial to the left or the right and press the select dial button to set the water hardness. (Refer to WATER HARDNESS AND FLUSHING from the Assembly page)

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
Coffee too strong or weak	• Amount of coffee and water is not correct (1 spoon : 150ml cup).	• Check correct amount of coffee or water is used.
Coffee leaking from basket when removed	• The basket drip-stop seal doesn't cover the gap properly due to foreign material.	• Check that there is no obstruction in the basket drip-stop seal. Wash out the basket seal by turning the basket upside down, and pressing down and rinsing into the seal to clear any particles obstructing that area.
Coffee overflowing from the basket **(CAUTION: If the basket has overflowed remove slowly and with caution)**	• Carafe is not inserted. • Amount of coffee and water is not correct (1 spoon : 150ml cup). • Grind size is too fine. • Too much grinds in the basket. • No paper in the basket. • Putting paper into mesh basket filter.	• If you are brewing with carafe, check that the carafe is inserted. • Check that the correct amount of coffee and water is used for the operation. • Correct grind size/amount. • Use mesh basket filter without paper and other baskets with paper.
'FILL' on LCD screen	• Water tank is empty or not enough water to brew the selected volume.	• Open the lid and pour the desired amount of cold, preferably filtered water. • While the tank is empty wipe the sensor prisms in the tank with a cloth. • Securely position the water tank onto the machine until an audible click is heard, indicating that the tank is properly locked in place.
Delayed Auto Start does not function	• Delayed Auto Start does not repeat after it has been activated.	• Re-engage the Delayed Auto Start mode for each time that it needs to be used.
Shows 'CLOCK' when Delayed Auto Start is pressed	• Current time should be set before setting Delayed Auto Start.	• Set the current time before using Delayed Auto Start.

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
Clock does not remember time	• Clock is cleared every time the unit is unplugged.	• Keep the unit plugged.
Delayed Auto Start starts at the wrong time	• Current time is not correct.	• Check that the current time is correct.
Carafe overfilling	• Carafe is not completely empty before brewing. • Amount of water is too much.	• Check that the carafe is empty before brewing. • Check that the MAX line on the water tank is not exceeded. • Ensure water runs freely through carafe lid.
LCD shows 'FILL' when there is water in the tank	• Check that the unit is not in direct sunlight or direct bright lighting.	• Move unit away from the light source.
Brew doesn’t start	• There is no water in the water tank. • Each brewing mode has different water amount limits, and it does not brew when the amount is beyond the limit.	• Check that the water tank is filled. • Check the water amount limits for each mode.
Showerhead falls out	• The showerhead may loosen and fall out from time to time if not inserted or tightened correctly.	• Please wash the showerhead ring and seal and re-insert.
Carafe drip stop stays down	• The drip stop is stuck.	• Pull the drip stop back up. • Clean the drip stop for any foreign objects of coffee grinds or stains. • If the problem persists and drip stop does not return to top position please call Breville Consumer Support.
Unit produces excessive steam while brewing or runs for extended periods with only steam output	• Brewing performance is affected by scale accumulated by hard water. • Brewing temperature profile is not properly set.	• Descale the unit. • Call Breville Consumer Support if problem persists.

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
'DESCALE' on LCD screen	• Brewing performance is affected by scale accumulated by hard water.	• Descale the unit.
Unit shows "too hot"	• Unit has been run too many times back to back and the components are overheated.	• Let unit rest for at least 20mins before starting another cycle.
COLD BREW modes are disabled	• If the water is more than 600ml, these modes are disabled.	• Reduce the amount of water in the tank.
Unit does not use the full amount of water in the water tank	• There is a blockage in the system.	• Empty the tank, remove any blockage, and wipe, inspect and clean any obstruction and coffee/fibre/dirt build up from the mesh filter at the bottom of the water tank. • Cool down and run FAST cycle with 1L. • Descale the unit. • Call Breville Consumer Support if problem persists.
Unit brewing slow	• There is a blockage in the system.	• Empty the tank, remove any blockage, and wipe, inspect and clean any obstruction and coffee/fibre/dirt build up from the mesh filter at the bottom of the water tank. • Cool down and run FAST cycle with 1L. • Descale the unit. • Call Breville Consumer Support if problem persists.
Uneven coffee bed	• Showerhead may not be attached/secured properly.	• Check the attachment of the showerhead locking ring and shower head. • Clean showerhead from any blockage or scale buildup.
A small amount of water remains in the tank after brewing	• This is part of the normal operation.	• No user action required, continue normal use.
Remove Carafe Lid is displayed on the LCD	• Water tank not firmly in place.	• If the message 'REMOVE CARAFE LID' is displayed on the LCD during a brew cycle exceeding a single serve

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
		volume (i.e. over 4 cups / 600 ml), firmly secure the water tank in place with an audible click to ensure the sensor accurately detects the water volume. • No lid is required for Cold Brew or Single Serve mode.
Machine is not brewing more than 4 cups	• The water tank is not fully engaged.	• Ensure there is enough water in the water tank to brew more than 4 cups. • Securely position the water tank onto the machine until an audible click is heard, indicating that the tank is properly locked in place.
Unit is unresponsive at the Water Hardness Level setting	• User did not press a button after the display showed "02:00 min".	• After adjusting the water hardness level using the dial, the display will show "02:00 min". Press any button to continue. • If the water tank is not filled, the unit will prompt "Fill Water". • If there is sufficient water, the machine will proceed to the priming cycle automatically.

the Luxe Brewer™
Glass & Thermal

설명서 – BDC415 & BDC465



BDC415



BDC465

Breville®

목차

제한적 제품 보증 28

브레빌 코리아®는 안전을 최우선으로 생각합니다 28

중요 안전 지침 28

제품 구조 34

부속품 35

기능 36

조립 37

작동 38

설정 43

팁 45

관리 및 세척 47

문제 해결 49

제한적 제품 보증

이 제품에 대한 브레빌 코리아의 보증은 보증 기간 이내에 잘못된 소재, 제조 공정 또는 기능으로 인해 결함이 있는 것으로 밝혀진 경우, 수리 또는 교체를 제공합니다. 해당 국가의 법률에 따른 모든 법적 보증 권리는 존중되며 당사의 보증은 이에 영향을 미치지 않습니다. 보증 기간에 대한 자세한 정보,

QR149

인쇄본 또는 전체 이용 약관을 확인하려면 QR 코드를 스캔하거나 www.breville.com 을 방문하시기 바랍니다. 브레빌 코리아 서비스 센터를 통한 문의도 가능합니다(연락처 정보는 뒷면 참조).

브레빌 코리아®는 안전을 최우선으로 생각합니다

브레빌 코리아는 안전을 매우 중요하게 생각합니다. 소중한 고객의 안전을 최우선으로 생각하여 제품을 설계하고 제조합니다. 전기 제품을 사용할 때는 각별한 주의를 기울이고 다음의 예방 조치를 준수해 주시기 바랍니다.

중요 안전 지침

사용 전 설명서를 잘 읽고 나중에 참조할 수 있도록 잘 보관하시기 바랍니다.

- 제품을 사용하기 전에 포장재, 플라스틱 전원 플러그 커버, 탈착식 라벨을 모두 제거하고 안전하게 폐기하세요.
- 사용 전 제품이 올바르게 조립되었는지 확인하고 작동에

앞서 전원 코드를 완전히 풀어주시기 바랍니다.

- 기기를 장시간 사용하지 않거나 청소·이동·조립·보관할 때는 전원 플러그를 뽑아두세요.
- 항상 안정적이고 내열성이 있는 표면에서 제품을 사용하십시오.
- 고압 가스 버너나 전열기 위 또는 근처, 가열된 오븐에 닿을 수 있는 곳에 제품을 놓지 마십시오.
- 장치와 모든 측면 패널 사이에 최소 10cm(4 인치) 이상의 여유 공간이 있는지 확인합니다.
- 물탱크에 물이 없는 상태에서 제품을 사용하지 마십시오. 가급적이면 여과된 냉수만 사용하시기 바랍니다. 제품에 다른 액체를 채워 추출하지 마십시오.
- 여과된 냉수를 사용하는 것이 좋습니다. 미네랄이 제거된 물이나 증류수는 추출한 커피 맛에 영향을 줄 수 있으므로 사용하지 않는 것이 좋습니다.
- 제품을 사용하기 전에 제공된 메시 바스켓 필터 또는 종이 필터(8~12 컵, 8.25cm (3 1/4 인치) 평평한 베이스 바스켓 스타일)를 커피 바스켓에 넣어야 합니다. 메시 바스켓 필터를 종이 필터와 함께 사용하지 마십시오.
- 추출 사이클 시작 전에:
  - 카라페의 드립 스톱이 위아래로 자유롭게 움직이는지 확인합니다.
  - 카라페를 완전히 비우고 카라페 뚜껑을 단단히 닫습니다.
  - 카라페를 드립 스톱 아래로 밀어넣습니다.

- 필터 바스켓이 비어 있고 제자리에 제대로 끼워져 있는지 확인합니다.

• 추출 사이클 동안:

- 장치의 추출 사이클이 진행 중일 때에는 카라페나 필터 바스켓을 분리하지 마십시오. 위의 사항을 준수하지 않을 경우 화상이나 중상을 입을 수 있습니다.
- 일부 표면은 뜨거울 수 있으므로 장치 또는 액세서리를 만지거나 들어올릴 때 주의하시기 바랍니다.
- 추출 사이클 도중 카라페 뚜껑이나 바스켓을 분리하면 화상을 입을 수 있습니다.

⚠ 주의

부상의 위험이 있을 수 있습니다. 뜨거운 물이 튀는 위험을 줄이려면 바스켓을 반드시 올바른 방법으로 설치하거나 제거해야 합니다.

• 카라페의 커피를 따르기 전에 항상 카라페 뚜껑이 잘 닫혀 있는지 확인합니다.

• 깨진 용기 또는 손잡이가 느슨하거나 약해진 용기는 사용하지 마십시오.

• 항상 제품이 식을 때까지 기다렸다가 추출 바스켓을 분리합니다.

• 뜨거운 표면을 만지지 마십시오. 손잡이를 사용하여 카라페를 들어올리고 옮기시기 바랍니다.

• 젖어있거나 차갑거나 열에 민감한 표면에 뜨거운 카라페를 놓지 마십시오.

• 사용하지 않을 때와 청소 전에는 전원 콘센트에서 플러그를 뽑으시기 바랍니다. 부품을 장착하거나 분리하기 전, 그리고

제품을 청소하기 전에 제품을 식혀야 합니다.

- 카라페는 이 제품 전용으로 설계되었습니다. 가스레인지나 전자레인지에는 절대 사용해서는 안 됩니다.
- 브레빌 코리아에서 권장하지 않는 액세서리 부품을 사용하면 화재, 감전 또는 부상을 초래할 수 있습니다.
- 온수가 튀는 위험을 줄이려면 필터 바스켓, 샤워 헤드 씰 및 샤워 헤드 잠금 링을 올바르게 설치해야 합니다.

⚠ 주의

제품의 손상을 방지하려면 세척할 때 알칼리성 세척제를 사용하지 마시고 대신에 부드러운 천과 순한 세척제를 사용합니다.

- 제품의 부품을 세척할 때 철 수세미나 거친 수세미 등 표면이 거친 소재나 연마재를 사용하지 마십시오.
- 발열체 표면은 사용 후 잔열이 남을 수 있습니다.
- 제품은 캐비닛(보관장)에 수납한 채 사용할 수 없습니다.
- 기기를 부적절하게 사용하거나, 잘못 조작하거나, 전문적으로 수리하지 않은 경우 보증이 무효화됩니다.
- 청소 이외의 서비스는 공인 서비스 담당자 또는 공인 브레빌 코리아 서비스 센터에서 수행해야 합니다.

전기 제품 사용 시 중요 안전 수칙

- 코드가 벤치나 테이블 가장자리에 늘어지게 두거나, 뜨거운 표면에 닿거나, 꼬이지 않도록 주의합니다.

- 사용 중에는 기기를 방치하지 마십시오.
- 어린이가 제품을 가지고 놀지 않도록 감독해야 합니다.
- 어린이가 제품을 사용하거나 어린이 옆에서 제품을 사용할 때는 세심한 감독이 필요합니다.
- 본 제품은 어린이를 포함하여 신체적, 감각적, 정신적 능력이 떨어지거나 경험과 지식이 부족한 사람이 사용하도록 제작되지 않았습니다. 단, 그러한 사람의 안전을 책임지는 사람이 제품 사용에 관해서 감독이나 지시를 하는 경우는 예외입니다.
- 이 기기는 8 세 이상의 어린이라도 안전한 사용 방법에 대한 지도를 받았고 관련된 위험을 이해하는 경우에 한하여 사용할 수 있습니다. 8 세 미만의 어린이가 보호자의 감독 없이 청소 및 사용자 유지 보수를 하지 않도록 하십시오. 제품과 코드를 8 세 미만 어린이의 손이 닿지 않는 곳에 보관하십시오.
- 이 제품은 가정용으로만 사용하시기 바랍니다. 이 제품을 원래 용도 이외의 목적으로 사용하면 안 됩니다. 움직이는 차량이나 보트에서는 사용하지 마십시오. 옥외에서 사용하지 마십시오. 잘못 사용하면 부상을 입을 수 있습니다.
- 전원 코드, 플러그 및 실제 제품에 손상이 있는지 정기적으로 점검하십시오. 어떤 식으로든 손상된 것으로 판명되면 즉시 제품 사용을 중단하고 전체 제품을 가장 가까운 공식 브레빌 코리아 서비스 센터에 맡겨서 검사, 교체 또는 수리를 받으시기 바랍니다.

- 전기 제품을 사용할 때는 추가적인 안전 보호를 위해서 누전 차단기(안전 스위치)를 설치하는 것이 좋습니다. 제품에 전기를 공급하는 전기 회로에 정격 잔류 작동 전류가 30mA 이하인 안전 스위치를 설치하는 것을 권장합니다. 전문적인 조언은 전기 기술자에게 문의해 주시기 바랍니다.


- 본 제품은 외부 타이머 또는 별도의 원격 제어 시스템으로 작동하도록 제작되지 않았습니다.



감전 위험이 있으므로 전원 코드, 전원 플러그, 제품을 물이나 기타 액체에 담그지 마십시오.

해당 제품은 가정용이며, 이 설명서를 보관하시기 바랍니다.

제품 구조

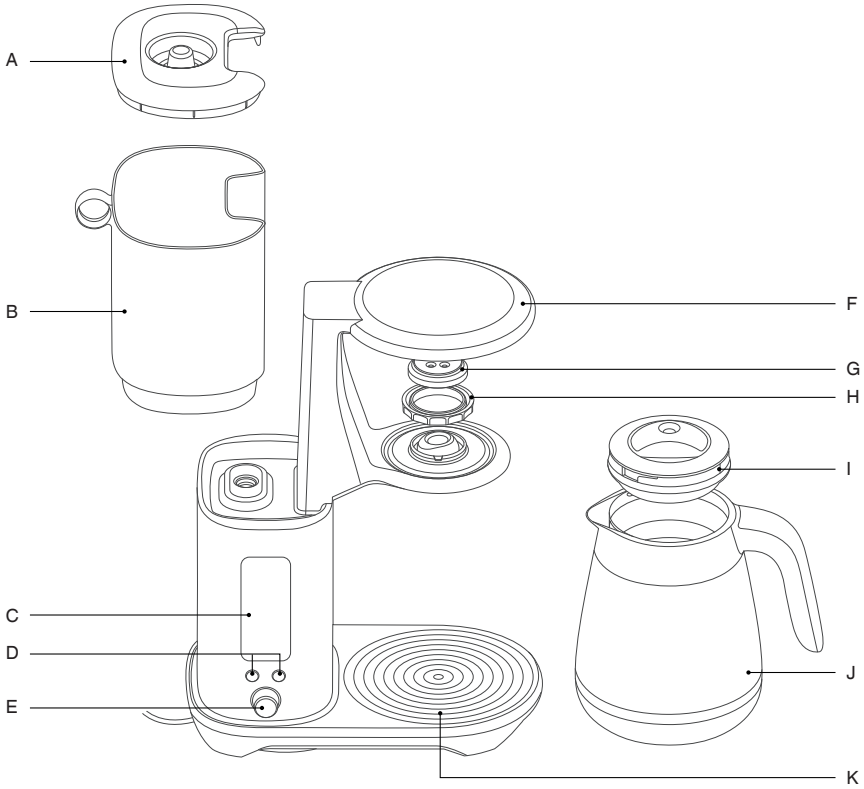

A. 물탱크 뚜껑

B. 물탱크

C. LCD 디스플레이

D. 설정 버튼

지연 자동 시작 버튼

E. 선택(SELECT) 다이얼

F. 샤워헤드

G. 샤워헤드 스크린


H. 샤워헤드 링

I. 카라페 뚜껑

J. 카라페

K. 핫플레이트(BDC415 전용)

부속품

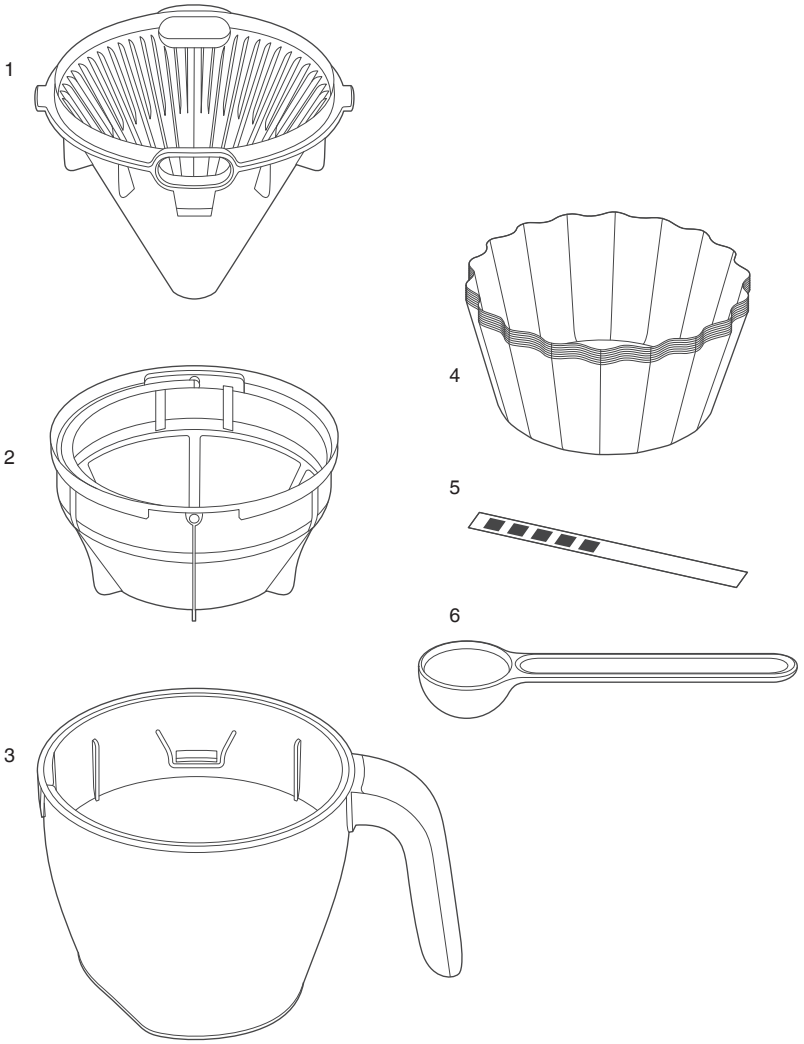

1. 콘 필터 바스켓 인서트
2. 메시 바스켓 필터
3. 추출 바스켓
4. 평바닥 종이 필터 팩(10 매)
5. 물 경도 스트립
6. 커피 계량 스푼

기능

다양한 스타일의 커피를 최상의 품질로 추출할 수 있도록 설계되었습니다.

추출

물탱크에서 급수되는 속도에 맞춰 신속하게 최대 12 잔(1.8L)을 추출합니다. 더 진하게 추출하려면, 커피 가루의 양을 늘리십시오.

콜드브루

콜드브루 커피를 최대 4 컵(600ml) 추출할 수 있으며, 30 분부터 36 시간까지 추출 시간을 조정할 수 있습니다.

보온

(BDC415 에만 해당)

통합형 가열판으로 유리 카라페에 담긴 커피의 온도를 유지합니다.

맞춤 설정

블룸 부피, 블룸 시간, 추출 온도 및 흐름 속도를 세밀하게 조정하여 각 취향에 맞는 완벽한 커피를 만들어 보세요.

지연 자동 시작

정해진 시간에 자동으로 추출을 시작하도록 머신을 설정할 수 있습니다.

필터 교체

(필터는 선택 항목이며 별도 판매)

필터 교체 주기는 머신에서 사용하는 물의 경도에 따라 달라집니다. 경도 1 등급인 경우, 160 회 추출 후 필터를 교체할 것을 권장합니다.

디스케일링

정기적으로 제품을 사용하면 경수 때문에 많은 내부 기능 구성품에 미네랄이 축적되어 유속, 추출 온도, 머신 성능, 커피 맛이 감소될 수 있습니다. 따라서 정기적인 디스케일링을 권장합니다.

사운드

변경 사항은 머신의 신호음으로 확인할 수 있습니다. 볼륨은 낮음(LOW), 중간(Med), 높음(HIGH), 꺼짐(OFF)으로 조정할 수 있습니다.

조립

참고

뜨거운 커피는 뜨거운 물과 분쇄된 커피 원두를 혼합하여 추출합니다. 추출 과정에서 물 온도가 중요한 이유는 추출 속도에 영향을 미치기 때문입니다. 추출은 분쇄된 커피에서 용해된 풍미와 물질을 의미합니다. 물이 뜨거울수록 오일, 산, 카페인 같은 화합물을 더 빨리 추출할 수 있습니다.

머신에 부착된 모든 라벨 및 포장재를 제거하고 폐기합니다. 포장 폐기 전 상자에서 모든 부품 및 부속품을 꺼냈는지 확인합니다.

부드러운 천으로 스테인리스 스틸 하우징 외부를 잘 닦습니다. 뚜껑, 추출 바스켓, 콘 필터 바스켓 인서트, 메시 바스켓 필터, 카라페를 따뜻한 비눗물에 씻어 줍니다. 표면에 흠집을 낼 수 있는 연마성 세제, 패드, 천 사용을 피합니다. 모두 충분히 헹구고 건조합니다. 마지막으로, 카라페의 드립 스톱을 세게 눌러 위아래로 자유롭게 움직이는지 확인합니다.

물 경도 설정 및 물 내리기

1. 커피 머신에 삽입한 커피 바스켓과 카라페(뚜껑 조립 포함)의 안이 텅 비어있는지 확인합니다.
2. 카라페 최대량 표시까지 물탱크에 차가운 물을 채웁니다. 머신을 전원 콘센트에 연결합니다.
3. 머신을 켜면 디스플레이에 '경도 설정(SET HARDNESS)' 메시지가 표시됩니다. 경도 테스트 스트립을 탱크와 동일한 물이 담긴 컵에 1 초 동안 담급니다. 경도 등급을 확인하기 위해 1 분 동안 기다립니다. 스트립에 표시된 막대 수에 따라 선택(SELECT) 다이얼을 돌려 경도 등급을 선택한 후 다이얼을 누릅니다. 변경 사항은 머신의 신호음으로 확인할 수 있습니다.

참고

테스트 결과가 4 또는 5 인 경우, 다른 물 공급원으로 교체합니다. 정수된 물을 사용하면 필터의 수명이 연장되고, 디스케일링 주기가 길어지며, 맛이 개선됩니다. 교체한 물 공급원의 경도를 반드시 테스트하고 결과에 따라 머신 설정을 조정합니다.

4. 머신에는 2:00 분이 표시됩니다. 다이얼을 한 번 누르면 머신에서 즉시 물 내리기를 1 회 실행합니다. 그러면 제품이 탱크에 담긴 물을 시스템을 통과해 빈 카라페로 내립니다. 물 내리기 후, 머신에서 신호음이 한 번 납니다. 바스켓과 카라페를 비웁니다.

시간 및 온도 단위 설정

물 내리기 1 회 실행 후, 머신에서 신호음이 세 번 나고 LCD 에 시간 설정이 표시됩니다. 설정할 시간이 먼저 깜박입니다. 선택(SELECT) 다이얼로 시간을 설정하고 다이얼을 눌러 변경사항을 저장합니다. 선택(SELECT) 다이얼로 분을 설정하고 다이얼을 눌러 변경사항을 저장합니다. 다음으로, LCD 에 온도 단위 설정이 표시됩니다. 선택(SELECT) 다이얼로 온도 단위를 선택하고 다이얼을 눌러 변경사항을 저장합니다. 머신에서 신호음이 한 번 나고 추출 모드가 표시되면 추출 준비가 된 것입니다.

가열판

(BDC415 에만 해당)

추출이 끝난 후 머신에서 카라페에 담긴 커피의 온도를 최적으로 유지하기 위해 보온 기능을 활성화합니다. 가열판 보온 시간은 설정에서 조정할 수 있습니다.

참고

- 한 잔만 추출할 때는 보온 기능이 활성화되지 않습니다.
- 한 잔 추출 후 보온 기능을 활성화하려면 설정 버튼을 누르고 보온을 선택한 후 다이얼을 눌러 활성화해야 합니다.

주의


사용 중일 때는 가열판을 만지지 마십시오, 매우 뜨겁습니다.

작동

카라페를 사용한 추출


카라페를 사용하여 추출할 때는 추출 바스켓이 깨끗한지, 또 바스켓 바닥의 드립 스톱 씰이 깨끗하고 커피 입자가 남아있지 않은지 확인합니다.

1. 추출할 커피 양에 맞는 바구니와 필터를 선택합니다. 2~8 잔을 추출할 때는 콘 모양 필터 바스켓에 종이 필터를 넣어 사용합니다(콘 모양 종이 필터는 미 포함). 8 잔 이상 추출할 때는 메시 바스켓 필터 또는 바닥이 평평한 추출 바스켓에 대형 페이퍼 필터를 넣어 사용합니다.

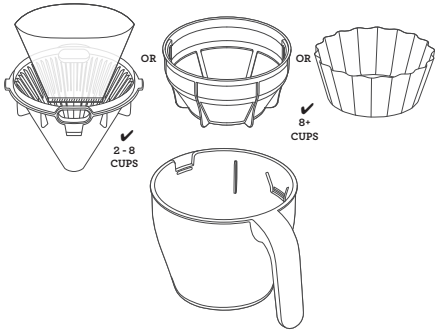

주의

바스켓에 메시 바스켓 필터나 종이 필터를 삽입하지 않으면 추출 사이클 도중 바스켓이 넘칠 수 있습니다.

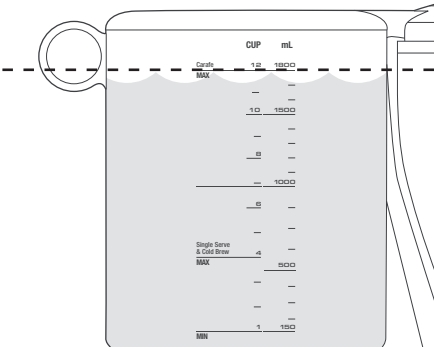

2. 추출할 커피 양에 따라 물탱크 표시선까지 깨끗한 찬물을 채웁니다. (참고: 물탱크 표시 참조)

참고


이 머신은 물탱크에 들어있는 물 전량을 사용해 커피를 추출합니다. 그러니 물탱크에 과도한 양의 물이 들어있지 않은지 확인하시기 바랍니다.

3. 최상의 커피 맛을 위해 브루잉 직전에 갓 볶은 원두를 버 그라인더로 갈아 사용할 것을 권장합니다. 분쇄도는 중간 입자/굵은 입자여야 하며, 커피 바스켓이 넘칠 수 있으니 에스프레소 추출에는 곱게 간 커피 가루를 사용하지 마시기 바랍니다.
4. 만들려는 커피양에 충분한 원두를 분쇄해 준비합니다. 1.8L 카라페의 경우,
   계량 스푼 약 12 스푼에 해당하는 99g 의 커피를 사용할 것을 권장합니다.
   커피 150ml 당 약 1 스쿱을 쓰면 됩니다.
5. 추출 바스켓에 콘 또는 평바닥 종이 필터를 넣거나 메시 바스켓을 삽입하고 간 커피를 넣습니다. 제품에 추출 바스켓을 삽입합니다.

참고

- 절대 메시 바스켓 필터와 종이 필터를 함께 사용하지 마시기 바랍니다.
- 종이 필터를 사용하면 더 나은 맛과 투명도의 커피를 즐기실 수 있습니다.
- 메시 바스켓 필터를 사용하면 고운 커피 찌꺼기가 커피에 섞여 추출될 수 있습니다. 이는 커피 잔이나 카라페에 침전물로 나타나며, 정상적인 현상입니다. 다른 필터를 사용하면 넘칠 수 있으므로 제공된 메시 바스켓 필터만 사용하시기 바랍니다.

6. 카라페 뚜껑을 닫고 카라페를 드립 스톱 추출구 아래에 놓습니다.

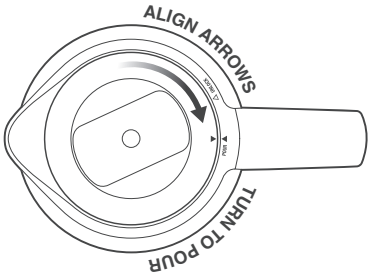

주의

'1 잔(SINGLE CUP)' 선보다 높은 수위에서 커피를 추출하는 경우, 추출 전에 반드시 카라페를 제자리에 놓습니다. 그렇지 않으면 커피 바스켓이 넘치게 됩니다.

참고

- 추출 전 항상 카라페가 깨끗하고 텅 비어있는지 확인하시기 바랍니다. 카라페에 남은 커피는

새로 추출한 커피 맛에 영향을 미치며, 카라페에 액체가 남은 경우 카라페가 넘칠 수 있습니다.

- 넘침 방지를 위해 추출 전 항상 카라페가 완전히 비어있는지 확인하시기 바랍니다.

7. 다이얼을 돌려 LCD 에서 추출(BREW)을 선택하고 한 번 누릅니다. 그러면 추출 진행도가 표시됩니다.
8. 커피가 준비되면 머신에서 신호음이 한 번 나고 보온(KEEP WARM) 모드로 자동 전환됩니다.

참고

- 추출 후 물탱크에 소량의 물이 남습니다. 이는 정상적 작동의 일환입니다.
- 커피 머신의 추출 사이클이 시작된 이후에는 절대 물탱크를 채우지 마시기 바랍니다.

BDC415 모델:

- 6 분간 사용하지 않으면 머신이 대기 모드로 전환됩니다. 대기 모드에서의 전력 소비량은 0.30W 이하입니다.

BDC465 모델:

- 5 분간 사용하지 않으면 머신이 대기 모드로 전환됩니다. 대기 모드에서의 전력 소비량은 0.30W 이하입니다.

콜드브루 커피 제조법

콜드브루 커피는 전통적인 뜨겁게 추출한 커피와 다른 방식으로, 온수가 아닌 냉수를 사용해 추출합니다. 보통 4~14 시간 동안 물과 커피를 함께 우려내는 것을 이르는 '완전 침출' 방식으로 콜드브루를 추출합니다. 이 방법은 쓴 맛이 적고 진하고 부드러운 커피를 만듭니다. 추출 비율도 다른 일반 커피의 추출 비율보다 훨씬 높습니다. 브레빌은 평균보다 2-3 배 높은 추출 비율, 즉 물 150ml 당 커피 3 스푼을 권장합니다.

이 브레빌 브루어에서는 최대 600ml 의 콜드브루를 추출합니다. 콜드브루를 추출하는 데는 긴 시간(보통 4-14 시간)이 걸리므로, 밤새 추출하도록 설정해 아침에 콜드브루 커피를 즐기실 것을 권장합니다.

1. 콜드브루(COLD BREW) 선 아래 또는 콜드브루 상한선(COLD BREW MAX LINE, 4 잔/600mL)까지 원하는 양의 물을 물탱크에 채웁니다.

참고

물탱크 안에 있는 물이 600mL 이상이거나 콜드브루 상한선(COLD BREW MAX LINE)을 넘을 경우, 화면 메뉴에서 콜드브루(Cold Brew)를 선택할 수 없습니다.

2. 바스켓을 분리하고 콘 인서트와 메시 바스켓 필터를 모두 분리했는지 확인합니다. 대형 종이

필터를 넣은 다음 일반 비율의 2-3 배(600ml 에 약 12 스푼)의 커피 가루를 넣습니다.

3. 제품에 바스켓을 다시 삽입합니다.
4. 카라페 뚜껑을 제거합니다.
5. 뚜껑을 제거한 카라페를 삽입합니다. 추출 중에는 카라페 뚜껑이 닫혀 있으면 안 됩니다. 아니면 다른 용기를 사용합니다.
6. 콜드브루(COLD BREW) 설정으로 이동해 다이얼을 한 번 누릅니다. 그러면 브루어가 가열 없이 추출을 시작합니다. 이 작업이 완료되면 카운트다운 타이머가 LCD 에 표시되어 콜드브루 추출이 완료되었음을 알려줍니다. 그와 동시에 브루어는 대기 중인 카라페에 추출된 콜드브루 커피를 자동으로 내려 줍니다.

참고


- 콜드브루 추출 시간은 30 분부터 36 시간까지, 원하는 대로 조절할 수 있습니다.
- 물탱크에 얼음을 넣지 않아야 합니다. 차가운 물을 넣으시기 바랍니다.
- 콜드브루 모드 작동 중에는 카라페 뚜껑이 열려있는지 확인하시기 바랍니다.

한 잔/소량(4 잔 미만, 500~600mL) 추출 방법

참고

BDC415 에서 한 잔만 추출할 때는 추출 후 가열판을 수동으로 켜야 합니다.

1. 물 양이 500~600mL 인 경우, 머신에서 이를 감지하고 자동으로 추출 설정을 조정하여 최상의 커피를 브루잉합니다. 잔에 차가운 물을 채운 다음 물탱크에 붓고 수위가 한 잔(SINGLE CUP) 선 아래인지 확인하시기 바랍니다.

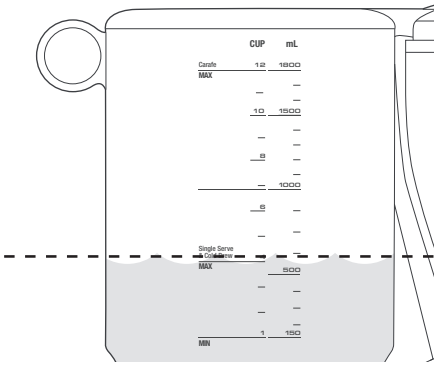

참고

- 물탱크에 '1 잔(Single Serve)' 선 이상으로 또는 커피를 담을 잔보다 많은 양의 물을 넣지 마시기 바랍니다. 브루어는 물탱크가 비워질 때까지 브루잉하므로, 결국 잔이 넘치게 됩니다.
- 커피를 한 잔만 내릴 때 LCD 에는 '카라페 뚜껑 제거(REMOVE CARAFE LID)' 메시지가 표시됩니다. 드립 스톱이 작동하지 않게 하여 커피 한 잔의 풍미를 온전하게 추출하게 해주는 기능입니다.

2. 빈 잔이나 뚜껑을 제거한 카라페를 추출 바스켓 추출구 아래에 위치시킵니다.
3. 탱크 수위에 맞는 양의 원두 커피를 갈아줍니다. 150ml 의 물에는 위를 평평하게 깎은 1 스푼의 분쇄 커피가 적당합니다.

참고

적은 양을 내릴 때는 콘 필터 바스켓 인서트를 사용해 추출수와 분쇄한 커피가 잘 닿게 합니다.

4. 정렬 표시에 맞춰 추출 바스켓에 콘 필터 바스켓을 넣습니다.
5. 콘 모양 종이 필터를 콘 필터 바스켓에 삽입한 후 분쇄된 커피를 넣습니다.
6. 제품에 추출 바스켓을 삽입합니다.
7. 다이얼을 돌려 추출(BREW) 모드를 선택합니다.
8. 다이얼을 눌러 추출을 시작합니다.

참고

약 4 분 간 추출된 후 커피가 잔에 담깁니다.

9. 커피가 준비되면 머신에서 증기가 배출되고 LCD 에는 추출 모드 메뉴가 표시됩니다.

지연 자동 시작 적용

정해진 시간에 자동으로 추출을 시작하려면 다음 단계에 따라 머신을 설정합니다.

1. 커피양과 동일한 깨끗한 찬물을 물탱크에 채웁니다.
2. 원두를 정확한 양으로 분쇄합니다. 물 150mL 당 분쇄된 커피 한 스푼으로 계측합니다.
3. 적절한 필터 바스켓과 종이 필터를 선택합니다.
4. 정렬 표시에 맞춰 추출 바스켓에 콘 필터 바스켓을 밀어넣습니다.
5. 종이 필터를 필터 바스켓에 넣고 분쇄된 커피를 넣습니다.

참고

절대 메시 바스켓 필터와 종이 필터를 함께 사용하지 마시기 바랍니다.

6. 제품에 추출 바스켓을 삽입합니다.
7. 카라페를 뚜껑을 닫은 채로 머신에 넣습니다.
8. 지연 자동 시작(DELAYED AUTO START) 버튼을 누릅니다. LCD 에 깜박이는 시간 설정이 표시됩니다.
9. 선택(SELECT) 다이얼을 돌려 원하는 시간을 설정한 후, 다이얼을 눌러 설정을 저장합니다. 변경사항은 머신의 신호음 한 번으로 확인됩니다.

참고

시계가 설정되지 않은 경우, 지연 자동 시작(DELAYED AUTO START) 버튼을 누른 후에도 머신이 계속 깜박이며 선택(SELECT) 다이얼을 사용한 변경사항을 확인하는 신호음을 내지 않습니다. 지연 자동 시작 기능을 사용하기 전에 시계가 설정되어 있는지 확인하십시오. 시계는 장치의 플러그를 뽑을 때마다 재설정됩니다.

10. 선택(SELECT) 다이얼을 돌려 추출 모드를 선택하면 머신에서 정해진 시간에 자동으로 추출을 시작합니다.

참고

- 머신에서 자동으로 추출을 시작할 때까지 LCD 에는 설정된 시간이 표시됩니다.
- 지연 자동 시작(DELAYED AUTO START) 버튼을 누르면 자동 시작(Auto Start)이 취소됩니다. 시계 기능은 지연 자동 시작 기능에만 적용됩니다. 일반 시계처럼 현재 시간을 지속적으로 표시하지 않습니다. 이는 정상적인 작동입니다. 일광 절약 시간이 시작되거나 끝날 때는 시계를 수동으로 재설정해야 합니다.

설정

참고

LCD 의 가장 위쪽에 설정 아이콘 ☼이 보이면 설정 모드입니다.



1. 설정 버튼을 누릅니다.
2. 다이얼을 돌려 LCD 메뉴를 탐색하고 다이얼을 한 번 눌러 선택합니다.

- **콜드브루**
- **맞춤 설정**
- **필터 교체**
- **디스케일링**
- **시계 설정**
- **신호음 볼륨 설정**

참고

설정 버튼을 다시 눌러 메인 메뉴로 돌아갑니다.

콜드브루 설정

1. 콜드브루(COLD BREW)가 강조 표시되어 있을 때 다이얼을 한 번 눌러 선택하면 콜드브루 옵션을 사용자 정의할 수 있습니다.
2. 시간이 깜박이고 있으면 다이얼을 왼쪽으로 돌려 줄이거나 오른쪽으로 돌려 늘린 후 다이얼을 한 번 눌러 시간을 선택하고 설정할 수 있습니다.

참고

콜드브루는 24 시간으로 기본 설정되어 있지만, 다이얼을 오른쪽으로 돌리면 더 길게 설정할 수 있습니다. 콜드브루 최대 침출 시간은 36 시간입니다.

3. 분이 깜박이고 있으면 다이얼을 왼쪽으로 돌려 줄이거나 오른쪽으로 돌려 59 분까지 늘린 후, 다이얼을 한 번 눌러 분을 선택하고 설정할 수 있습니다.
4. 콜드브루 침출 시간이 설정되었습니다.
5. LCD 가 메인 메뉴로 돌아갑니다.

사용자 정의 옵션 설정

LCD 에 사용자 정의(CUSTOM)가 강조 표시되어 있을 때 다이얼을 한 번 눌러 선택하면 사용자 정의 옵션이 LCD 에 표시됩니다.

다이얼을 돌리고 한 번 눌러 사용자 정의할 옵션을 선택합니다.

사용자 정의 가능한 옵션:

뜸 들임 양: 뜸 들이기 시작하기 전에 사용할 물 양을 조절합니다.

뜸 들임 시간: 온수가 분쇄된 커피에 닿을 때 커피 뜸을 들이게 됩니다.

뜸 들임 권장 시간은 30~60 초입니다. 이 시간 동안 커피가 자연스럽게 뜸 들 수 있도록 추출 사이클이 일시 중지됩니다. 뜸 들이기 시간에 대한 더 자세한 정보는 '팁(TIPS)'을 참조하시기 바랍니다.

추출 온도:커피 추출 시 물 온도를 조절합니다. 물 온도 설정에 대한 더 자세한 정보는 '팁(TIPS)'을 참조하시기 바랍니다.

유속: 물 공급 속도를 조절해 접촉 시간을 조절하고 추출 시간을 제어합니다. 느림(Slow), 보통(Medium, 기본 설정), 빠름(Fast) 중에 선택합니다.

정수 필터

(필터는 선택항목이며 별도 판매)

다이얼을 돌려 필터 아이콘을 강조 표시합니다. 필터 아이콘이 강조 표시되면 다이얼을 한 번 눌러 선택합니다.

디스케일링

다이얼을 돌려 디스케일링 아이콘을 강조 표시합니다. 디스케일링 아이콘이 강조 표시되면 다이얼을 한 번 눌러 선택합니다.

디스케일링 과정은 관리 및 청소(Care and Cleaning)를 참조하십시오.

시계 설정

LCD 에 표시된 시간을 조정합니다.

다이얼을 돌려 시계 아이콘을 강조 표시합니다. 시계 아이콘이 강조 표시되면 다이얼을 한 번 눌러 선택합니다.

1. 설정할 시간이 먼저 깜박입니다. 다이얼을 왼쪽 또는 오른쪽으로 돌려 시간을 설정하고 다이얼을 눌러 시간을 저장합니다.
2. 그 다음, 분을 설정할 때도 다이얼을 왼쪽 또는 오른쪽으로 돌리고 다이얼을 눌러 변경 사항을 저장합니다.
3. LCD 가 메인 메뉴로 돌아갑니다.

사운드 볼륨 설정

낮음(LOW), 보통(MED), 높음(HIGH) 또는 꺼짐(OFF)으로 설정합니다.

다이얼을 돌려 사운드 아이콘을 강조 표시합니다. 사운드 아이콘이 강조 표시되면 다이얼을 한 번 눌러 선택합니다.

1. 다이얼을 왼쪽 또는 오른쪽으로 돌리면 LCD 에 보통(MEd), 높음(HIGH), 꺼짐(OFF) 또는 낮음(LOW)이 표시됩니다.
2. 선택한 신호음 볼륨에서 다이얼을 한 번 누릅니다.
3. LCD 가 메인 메뉴로 돌아갑니다.

팁

원두

- 최고의 원두는 신선한 원두입니다! 훌륭한 맛의 커피를 만드는 비결은 갓볶은 최고 품질의 커피에 있습니다. 커피의 풍미는 로스팅 후 5-20 일 동안 최고 수준을 유지합니다. 항상 커피 포장지의 '로스팅 날짜'를 확인하시기 바랍니다. 정확한 로스팅 날짜를 알 수 없으므로 "유통 기한" 또는 "사용 기한" 날짜가 표기된 커피는 피하시기 바랍니다.
- 커피의 풍미와 농도는 개인의 취향입니다. 원하는 맛을 내기까지 다양한 원두와 커피량을 시도하시기 바랍니다.
- 풍미와 바디감이 훌륭한 커피를 만드는 비결은 갓 분쇄한 원두에 있습니다. 미리 분쇄된 커피는 그 본연의 풍미와 향을 대부분 잃어버리므로, 더 훌륭한 맛을 위해 항상 커피 추출 직전에 원두를 분쇄하시기 바랍니다.
- 커피 원두는 어둡고 서늘하며 건조한 곳에 보관해야 합니다. 가능하면 진공 밀봉하면 좋습니다.
- 커피 원두는 소량으로 구매해서 보관 시간을 줄이고 어느 때라도 1 주 분량이 넘는 원두를 보관하지 마시기 바랍니다.

가루 커피

- 가루 커피는 편리하지만 추출 직전에 분쇄한 커피만큼 맛이 좋지는 않습니다. 고품질의 버 그라인더에 투자하여 커피를 추출하기 직전에 신선한 원두 커피를 갈아 훌륭한 맛의 커피를 즐기실 것을 권장합니다.
- 분쇄도는 필터 바스켓을 통과해 흐르는 물의 속도, 나아가 커피의 맛에도 영향을 미칩니다. 커피 입자 크기가 너무 고우면 물이 커피를 통과해 흐르지 않으며, 커피 바스켓이 막히거나 넘칠 수 있습니다. 또한 메시 바스켓 필터를 통과해 커피 잔이나 카라페에 침전물로 나타날 수 있습니다. 그렇게 추출된 커피는 과다 추출되어 색깔이 진하며 씁쓸한 맛을 냅니다. 분쇄된 커피 입자가 너무 굵으면 물이 커피 입자 사이를 너무 빨리 통과합니다. 그렇게 추출된 커피는 과소 추출되어 풍미가 부족합니다.
- 항상 드립 커피 머신에 적합한 "드립 필터 그라인더"를 사용합니다. 분쇄 입자가 더 고우면 커피 바스켓이 막히고 커피가 과도 추출될 수 있으므로 "에스프레소용 그라인더"를 사용하지 마시기 바랍니다.

뜸들이기

- 커피를 로스팅하면 이산화탄소가 원두 안에 갇히게 됩니다. 분쇄한 커피는 온수를 만났을 때 이 이산화탄소를 방출하는데, 이를 커피의 '뜸을 들인다'고 표현합니다. 본 브루어는 유속을 제어해 뜸들이기 시간을 자동으로 조절할 수 있습니다. 뜸 들이기는 추출한 커피의 향과 풍미에 영향을 줄 수 있습니다. 커피가 너무 쓴 경우에는 뜸들이기 시간을 줄이고, 신맛이 나는 경우에는 뜸 들이기 시간을 늘리시기 바랍니다.

예열

- 최상의 결과를 얻으려면 카라페와 커피 잔을 예열합니다. 카라페 또는 잔을 예열하면 커피의 최적 온도를 유지하고 커피를 더 오랫동안 따뜻하게 유지하는 데 도움이 됩니다. 카라페

또는 잔에 온수를 붓고 약 30 초 동안 두어 예열합니다.

수질

- 맛있는 커피를 추출하기 위해 신선하고 맛있는 물은 없어서는 안 될 요소입니다. 물에 침전물이 과도하게 들어 있거나 맛이 이상하거나 냄새가 나는 경우, 정수된 물을 사용할 것을 권장합니다.

커피/물 비율

물 150ml 당 브레빌 계량 스푼으로 1 스푼의 커피를 넣을 것을 권장합니다. 개인의 취향에 따라 양을 조절하시기 바랍니다. 사전에 분쇄한 커피 가루는 브레빌 계량 스푼으로 최대 12 스푼을 넣을 수 있습니다. 이 양을 초과하는 경우 커피 바스켓이 넘칠 수 있습니다.

커피 잔 수 (잔당 150ml)	**커피 가루 양**	**물 양**
1	1(8.25g)	150ml
2	2(16.5g)	300ml
3	3(24.75g)	450ml
4	4(33g)	600ml
5	5(41.25g)	750ml
6	6(49.5g)	900ml
7	7(57.75g)	1.05L
8	8(66g)	1.2L
9	9(74.25g)	1.35L
10	10(82.5g)	1.5L
11	11(90.75g)	1.65L
12	12(99g)	1.8L

관리 및 세척

청소 전에는 항상 브루어의 전원을 끄고 콘센트에서 플러그를 뽑습니다.

제품 외부 청소

외부 하우징과 LCD 화면은 물에 적신 부드러운 천으로 청소할 수 있습니다. 세제는 LCD 화면이 아닌 천에 묻힙니다. 부드럽고 마른 천으로 닦습니다. 마른 키친타월이나 연마성 천과 세제로 청소하거나 물기를 제거하면 표면이 긁힐 수 있습니다.

커피 바스켓과 메시 바스켓 필터 청소

커피 바스켓을 분리합니다. 커피 찌꺼기와 종이 필터를 버립니다. 커피 바스켓과 메시 바스켓 필터는 흐르는 물에 헹굽니다. 메시 바스켓 필터의 미세한 구멍들이 막힌 데 없이 깨끗한지 확인합니다. 더 깨끗한 청소를 원한다면 커피 바스켓과 메시 바스켓 필터를 부드러운 솔이 달린 브러시를 사용하여 따뜻한 비눗물에 씻습니다.

⚠ 주의

커피 바스켓과 메시 바스켓, 종이 필터는 추출 후 여전히 매우 뜨거울 수 있습니다. 각별히 주의해 식힌 뒤 분리하시기 바랍니다.

카라페 청소

매 사용 후에는 카라페를 비웁니다. 카라페에 얼룩을 남길 수 있으니 추출한 커피를 밤새 카라페에 보관하지 마시기 바랍니다. 카라페와 카라페 뚜껑을 흐르는 따뜻한 물에 헹굽니다. 더 깨끗한 청소를 원한다면 부드러운 솔이 달린 브러시를 사용하여 따뜻한 비눗물에 카라페를 주기적으로 씻는 것을 권장합니다. 표면에 흠집을 낼 수 있는 연마성 세제, 패드, 천을 사용하지 마십시오. 물로 헹군 후 완전히 말리십시오.

샤워헤드 청소

샤워헤드를 주기적으로 닦습니다. 더 철저한 청소가 필요한 경우, 샤워헤드 링의 잠금을 해제해 샤워헤드를 분리합니다. 시계 방향으로 돌린 후 샤워헤드를 분리하여 청소합니다. 완료 후 샤워헤드를 다시 설치합니다.

디스케일링

정기적으로 제품을 사용하면 경수 때문에 많은 내부 기능 구성품에 미네랄이 축적되어 유속, 브루잉 온도, 머신 성능, 커피의 맛을 감소시킬 수 있습니다. 정기적으로 디스케일링하는 것을 권장합니다. LCD 에 디스케일링 아이콘이 표시되고 깜박이면 디스케일링을 실시해야 합니다.

참고

- 디스케일링 진행 전 물탱크에서 정수 필터를 제거했는지 확인합니다.
- 디스케일링은 회당 약 30 분이 소요됩니다.

1. 물탱크를 비웁니다. 제조업체 설명서에 따라 디스케일링제를 준비합니다. 빈 물탱크에 디스케일링 용액을 붓고 탱크의 1000mL 디스케일링 선까지 용액이 채워졌는지 확인합니다.
2. 드립 스톱 추출구 아래 빈 바스켓과 카라페를 놓습니다. (카라페가 비어 있고 뚜껑이 단단히 잠겨 있는지 확인합니다.)
3. 머신의 설정 버튼을 누른 다음 다이얼을 돌려 디스케일링 아이콘을 강조 표시합니다.

디스케일링 아이콘이 강조 표시되면 다이얼을 한 번 눌러 이 옵션을 선택합니다. LCD 에 30:00 분이 표시됩니다.

4. 다이얼을 한 번 누르면 디스케일링이 시작되고 타이머가 LCD 에 표시됩니다.
5. 탱크에서 디스케일링 용액이 비워지면 화면에 채우기(FILL) 메시지가 깜박입니다. 머신에서 탱크를 제거하고 남아 있는 액체를 비운 후, 탱크에 깨끗한 물을 MAX 선까지 다시 채워 헹굼을 진행합니다.
6. 디스케일링이 완료되면 LCD 화면에 메인 메뉴가 다시 표시됩니다.

참고

카라페의 물을 버리고 완전히 헹굽니다. 물탱크를 제거하고 탱크에서 물을 완전히 제거한 후 잘 헹굽니다.

주의

카라페 안에 있는 물이 뜨거울 수 있으니, 카라페를 취급하거나 물을 버릴 때 주의하십시오.

공장 초기화

물 경도 설정을 포함하여 머신을 공장 초기화하려면, 설정 버튼과 지연 자동 시작(Delayed Auto Start) 버튼을 함께 3 초 동안 누릅니다. LCD 에 경도 설정(SET HARDNESS)이 표시되면, 다이얼을 왼쪽 또는 오른쪽으로 돌리고 선택 다이얼 버튼을 눌러 물의 경도를 설정합니다. (조립 페이지에 있는 '물 경도 및 물 내리기' 참조)

문제 해결

문제	가능한 원인	해결 방법
커피가 너무 진하거나 연함	• 커피 양과 물 양이 적절하지 않습니다 (1 스푼 : 물 150ml).	• 커피 양과 물 양이 정확했는지 확인합니다.
바스켓을 분리할 때 바스켓에서 커피 샘	• 바스켓 드립 스톱 씰이 이물질로 인해 틈새를 제대로 메우지 못하고 있습니다.	• 바스켓 드립 스톱 씰에 이물질이 없는지 확인합니다. 바스켓을 거꾸로 들고 바스켓 씰을 씻은 뒤, 씰을 누르고 헹구어 그 부분을 막고 있는 입자를 제거합니다.
바스켓에서 커피가 넘쳐 흐름 **(주의: 바스켓이 넘치는 경우 천천히 조심스럽게 분리)**	• 카라페가 삽입되지 않았습니다. • 커피 양과 물 양이 적절하지 않습니다 (1 스푼 : 물 150ml). • 커피가 너무 곱게 분쇄되었습니다. • 바스켓에 커피를 너무 많이 넣었습니다. • 바스켓에 종이 필터를 넣지 않았습니다. • 메시 바스켓 필터에 종이 필터를 넣었습니다.	• 카라페로 추출하는 경우 카라페가 제대로 삽입되었는지 확인합니다. • 사용한 커피 양과 물 양이 정확했는지 확인합니다. • 분쇄도와 커피 양을 변경합니다. • 메시 바스켓 필터는 종이 필터 없이 사용하고, 다른 바스켓은 종이 필터를 넣어 사용합니다.
LCD 화면에 '채우기(FILL)' 표시	• 물탱크가 비었거나 선택한 커피량을 추출하기에 물이 부족합니다.	• 뚜껑을 열고 원하는 만큼의 차가운 물을 붓고, 가급적이면 여과된 물을 사용합니다. • 물탱크가 비어 있는 동안, 물탱크의 센서 프리즘을 천으로 닦습니다.

문제	가능한 원인	해결 방법
		• 물탱크가 제대로 잠겼음을 나타내는 소리가 들릴 때까지 물탱크를 머신에 잘 끼웁니다.
지연 자동 시작 기능 미작동	• 지연 자동 시작 기능은 한 번 활성화된 후 자동 반복되지 않습니다.	• 필요할 때마다 지연 자동 시작 모드를 다시 선택해야 합니다.
지연 자동 시작을 누르면 '시계(CLOCK)' 표시	• 지연 자동 시작을 설정하기 전에 현재 시간을 설정해야 합니다.	• 지연 자동 시작을 사용하기 전에 현재 시간을 설정합니다.
시계의 현재 시간이 틀림	• 시계는 장치의 플러그를 뽑을 때마다 재설정됩니다.	• 장치의 코드를 플러그에 꽂습니다.
지연 자동 시작 작동 시간이 틀림	• 현재 시간이 정확하지 않습니다.	• 현재 시간이 올바르게 설정되었는지 확인합니다.
카라페가 흘러 넘침	• 추출 전 카라페가 완전히 비워지지 않았습니다. • 물의 양이 너무 많습니다.	• 추출 전 카라페가 완전히 비어있는지 확인합니다. • 물탱크의 물이 최대량 선을 넘지 않았는지 확인합니다. • 카라페 뚜껑을 통해 물이 잘 흐르는지 확인합니다.
물탱크에 물이 있는데 LCD 화면에	• 장치가 직사광선에 노출되었는지 확인합니다.	• 장치를 직사광선을 피해 옮깁니다.

문제	가능한 원인	해결 방법
'채우기(FILL)'가 표시됨		
추출이 시작되지 않음	• 물탱크에 물이 없습니다. • 각 추출 모드마다 지정된 물의 양이 다르며, 필요한 물의 양보다 물이 부족한 경우 추출이 시작되지 않습니다.	• 물탱크의 물이 충분한지 확인합니다. • 각 추출 모드별 필요한 물의 양을 확인합니다.
샤워헤드가 빠졌음	• 샤워헤드를 제대로 삽입하지 않았거나 조이지 않은 경우, 가끔 헐거워지고 빠질 수 있습니다.	• 샤워헤드 링과 씰을 씻고 다시 삽입합니다.
카라페 드립 스톱이 아래로 내려갑니다	• 드립 스톱이 걸렸습니다.	• 드립 스톱을 다시 위로 당깁니다. • 드립 스톱을 청소해 커피 찌꺼기나 얼룩의 이물질을 제거합니다. • 문제가 지속되고 드립 스톱이 상단으로 돌아가지 않으면 브레빌 코리아 고객 지원 센터에 문의합니다.
추출 중 브루어에서 지나치게 많은 증기가 나오거나 증기만 내뿜으며 더 오래 작동함	• 추출 성능은 경수에 의해 축적된 스케일의 영향을 받습니다. • 추출 온도가 제대로 설정되지 않았습니다. •	• 장치를 디스케일링합니다. • 문제가 지속되면 브레빌 코리아 고객 지원 센터에 문의합니다.
LCD 에 '디스케일링 (DESCALE)'이 표시됨	• 추출 성능은 경수에 의해 축적된 스케일의 영향을 받습니다.	• 장치를 디스케일링합니다.

수입판매원: 브레빌코리아 유한회사

서울특별시 강남구 논현로 159길 41 (신사동)

고객 서비스 센터: 080-822-1691

Breville®

Master Every Moment™

Copyright Breville Pty. Ltd. 2026.

지속적인 제품 개선으로 인해, 본 책자에 담긴 제품 삽화 및 사진은 실제 제품과 약간 다를 수 있습니다.

BDC415 & BDC465 KOR – A26