the EasySet™ Slow Cooker

Instruction Book – Suits all LSC460 models

Breville®

CONTENTS

Limited Product Warranty	2
Breville® Recommends Safety First	2
Important Safeguards	2
Components	8
Control	9
Functions	10
Care & Cleaning	14

LIMITED PRODUCT WARRANTY

Breville's warranty for this product covers the repair or replacement if it's found to be defective due to faulty materials, workmanship, or function within the warranty period. All legal warranty rights under applicable national legislation will be respected and will not be impaired by our warranty. For details on length of warranty, to obtain a printed copy or to read full terms and conditions please scan the QR code or visit www.breville.com. Alternatively, call the Breville Service Centre (see back cover for contact details).

QR149

BREVILLE® RECOMMENDS SAFETY FIRST

At Breville we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition, we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

IMPORTANT SAFEGUARDS

Read all instructions before use and save for future reference.

- Remove and safely discard any packaging material and promotional labels before using the slow cooker for the first time.
- When unpacking the slow cooker, check to see if you have received all the items listed in the parts list, before discarding the packaging.
- Always ensure the slow cooker is properly assembled

before use. Follow the instructions provided in this book.

- Always operate the slow cooker on a stable and heat-resistant surface.
- Do not place the slow cooker near the edge of a bench or table during operation. Ensure that the surface is level, clean, and free of water and other substances.
- Do not operate the slow cooker on a sink drain board.
- Do not place the slow cooker directly on a heat sensitive bench top, such as a stone bench top, when cooking. This type of bench top is heat sensitive to uneven heat and may crack if heated locally. To cook on a heat sensitive bench top, place a chopping board or heat proof mat underneath the cooker.
- Do not operate the slow cooker on an incline plane.
- Do not move while the slow cooker is switched on.
- Use the removable cooking bowl supplied with the slow cooker. Do not use any other bowl on the slow cooker base.
- Do not use a damaged removable cooking bowl. If damaged, replace the bowl before using.
- Lift and remove the lid carefully to avoid scalding from escaping steam.
- Never plug in or switch on the slow cooker without having the removable cooking bowl placed on the slow cooker base.
- Ensure the removable cooking bowl is correctly positioned in the slow cooker base before you commence cooking.
- Do not place food or liquid in the slow cooker base. Only the removable cooking bowl is designed to contain food or liquid.
- Do not plunge a hot cooking bowl into cold water. While the cooking bowl is designed to be durable, thermal shock may still occur, resulting in cracking or breakage to the cooking bowl.
- Never operate the slow cooker without food and liquid in the removable cooking bowl. Ensure the cooking bowl is at least ½ to ¾ full of

food or liquid before switching on the slow cooker.

- Always cook with the lid on for the recommended time.
- Do not place anything, other than the provided lid, on top of the slow cooker when assembled, when in use and when stored.
- Always have the lid placed correctly into position on the removable cooking bowl throughout operation of the slow cooker unless stated on the recipe to have it removed.
- Do not allow water from the lid to drip into the slow cooker base, only into the removable cooking bowl.
- Do not touch hot surfaces. Use the handle for lifting and carrying the slow cooker and use dry oven mitts to remove the lid and / or removable cooking bowl.Lift and remove the lid carefully and angle away from you to avoid scalding from escaping steam. Allow the slow cooker to cool completely before moving or cleaning any parts.
- Extreme caution must be used when the slow cooker contains hot food and liquids.
- The temperature of accessible surfaces will be high when the slow cooker is operating and for some time after use.
- Do not place the removable cooking bowl when hot on any surface that may be affected by heat.
- To prevent scratching the cooking surface of the removable cooking bowl, always use wooden, silicone or plastic utensils.
- High humidity, altitude, cold tap water, ingredients and minor fluctuations may affect the cooking times in the slow cooker.
- The recommended cooking times are approximate. Cooking times can vary depending on ingredients and quantities in recipes.
- Care should be taken when handling the slow cooker after cooking, ensuring that the slow cooker body and parts are not touched as these may still be hot.
- If you are not home during the slow cooking process and the power goes out, throw away the food even if it looks cooked.

- If you are at home during the slow cooking process and the power goes out, finish cooking the ingredients immediately by some other means such as a gas stove, on an outdoor grill or elsewhere, where the power is on.
- When you are at home, and if the food was completely cooked before the power went out, the food should remain safe up to two hours in the cooker with power off.
- If using plastic utensils, do not leave inside the slow cooker when hot.
- The slow cooker is not intended to be operated by means of an external timer or separate remote-control system or any other device that switches the slow cooker on automatically.
- Do not use the removable cooking bowl in a conventional oven or microwave oven.
- Do not place the removable cooking bowl on a gas burner or electric hotplate.
- To avoid electrical overload, it is recommended that no other appliances are plugged into the same circuit as your slow cooker when it's in use.
- Do not use chemicals, steel wool, metal scouring pads or abrasive cleaners to clean the outside of the slow cooker housing or the cooking bowl as these can damage the housing or the cooking bowl.
- Keep the slow cooker clean. Follow the cleaning instructions provided in this book.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before use.
- Connect only to a 230V or 240V power outlet.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid or allow moisture to come in contact with the parts, unless it is recommended in the cleaning instructions.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard, do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. **Misuse may cause injury.**
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

- Always switch off the appliance, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always switch off the appliance, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- Do not place this appliance on or near a heat source, such as hot plates, ovens, or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.

FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS

COMPONENTS

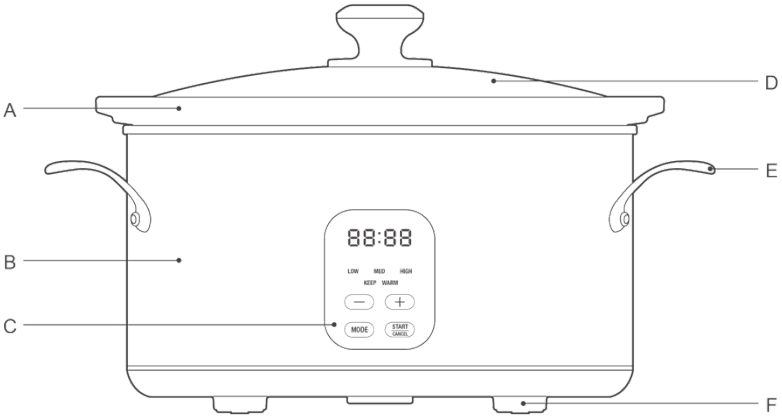

A. Removable 6.0L ceramic cooking bowl
B. Slow cooker housing
C. LED display
D. Tempered glass lid
E. Slow cooker handles
F. Non-slip feet

Not Shown

Power cord and plug

CONTROL

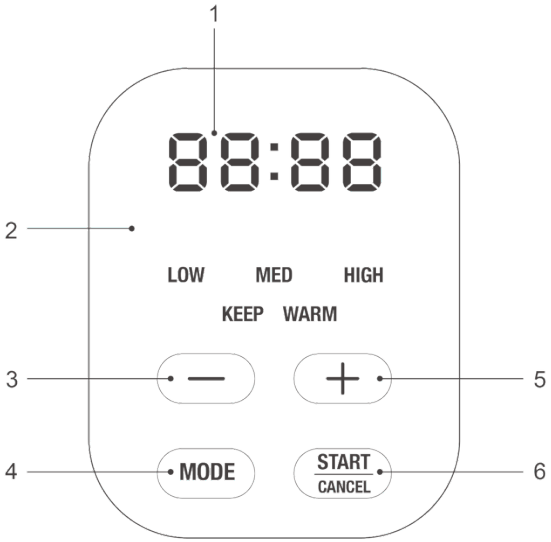

1.Countdown timer (Hours & Minutes)
2.LED DISPLAY Displays selected mode and cooking time.
3.– Adjust cooking time in 30-minute increments.
4.MODE Select LOW, MED, HIGH or KEEP WARM.
5.+ Adjust cooking time in 30-minute increments.
6.START | CANCEL Start or cancel operation.

FUNCTIONS

BEFORE FIRST USE

1. Remove all promotional labels and packaging materials.
2. Wash the removable cooking bowl and glass lid in warm, soapy water. Rinse and dry thoroughly.
3. Wipe the slow cooker housing with a soft damp cloth and dry thoroughly. Ensure all parts are completely dry before assembling.

USING YOUR BREVILLE SLOW COOKER

1. Place ingredients into the removable cooking bowl and insert the bowl into the slow cooker base.

⚠ WARNING

Ensure removable bowl is correctly positioned in the housing before you commence cooking.

2. Place the lid securely on the bowl.
3. Plug into a 230V or 240V power outlet and switch on.
4. Press MODE to toggle between LOW, MED, HIGH or KEEP WARM.
5. Press – or + to set the cooking time. The time adjusts in 30-minute increments.
6. Press START | CANCEL to begin. A long beep will sound, and the countdown will begin.
7. To cancel at any time, press START | CANCEL. A long beep will sound, and the unit will return to ready mode with last used setting.
8. When cooking has finished, a long beep will sound, and the unit will switch to Auto Keep Warm.
9. Once Auto Keep Warm has completed, OFF' will display on the screen and another long beep will sound.

⚠ WARNING

Always lift and remove the glass lid carefully and angled away from yourself to avoid scalding from escaping steam.

⚠ IMPORTANT

- Always operate the slow cooker on a stable and heat-resistant surface.
- Do not touch hot surfaces, use oven mitts to remove the lid and/or removable bowl. Lift and remove the lid carefully and away from you to avoid scalding from escaping steam.
- The temperature of accessible surfaces will be high when the slow cooker is operating and for some time after use.
- It is recommended not to place the appliance on a stone bench top when cooking, as the stone may crack when heated unevenly.
- During cooking, the mode can be adjusted by pressing MODE repeatedly – the cooking time no cooking time change if the MODE change is made during cooking.
- During cooking, the cooking time can be adjusted by pressing -/+.

AUTO KEEP WARM

- When cooking on LOW, MED or HIGH is complete, a long beep will sound, and the unit will automatically switch to Keep Warm.
- Auto Keep Warm will count down from 6 hours. Once complete, another long beep will sound, 'OFF' will display on screen, and all lights except the START/CANCEL light will extinguish.
- To adjust the Auto Keep Warm time, press the – / + buttons until the desired time is displayed.

MANUAL KEEP WARM

1. Press MODE until KEEP WARM is selected, then press – or + to set the time (between 0:30 – 6:00 hours).
2. Press START to begin. A long beep will sound, and the countdown will begin.
3. To cancel at any time, press START | CANCEL. A long beep will sound, and the unit will return to ready mode.

POWER INTERUPTION

- If power is interrupted during cooking, the slow cooker will reset to ready mode.
- The unit will return to 'READY' mode after 5 minutes of inactivity.
- The standby or ready mode power consumption is approximately 0.8W.
- Under this mode, the unit consumes low power if it is kept unplugged not switched-on at the power outlet.
- To save energy, switch off and unplug at the power outlet if the unit is not in use.

COOKING TABLE

FUNCTION	DEFAULT TIME (HOURS)	ADJUSTABLE RANGE (HOURS)	AUTO KEEP WARM
LOW	8:00	0:30–16:00	Yes
MED	6:00	0:30–12:00	Yes
HIGH	5:00	0:30–12:00	Yes
KEEP WARM	4:00	0:30–6:00	Manual only

- ^ The time can be adjusted in 30-minute increments.

TIPS

SUITABLE CUTS FOR SLOW COOKING

BEEF	Chuck, skirt, round steak, boneless shin (gravy), bone-in-shin (Osso Bucco) blade, topside.
LAMB	Shanks, drumsticks (frenched shanks), neck /forequarter chops, shoulder, ribs.
VEAL	Diced leg, shoulder, neck chops, knuckle , cheek, shanks, shin, forequarter.
PORK	Diced shoulder, belly, loin, tenderloin, leg, spare ribs.
CHICKEN	Drumsticks, thigh meat, Maryland, lovely legs.

STEAMING VEGETABLES

- Smaller pieces will steam faster compared to larger pieces.
- To ensure consistent cooking results, vegetables should be of uniform size.
- Both fresh and frozen vegetables can be steamed but note that frozen ones will take longer to cook. If using frozen vegetables, there is no need to thaw before cooking.
- Depending on the size, shape of vegetables, and personal preference, you might need to adjust the recommended cooking times. To achieve a softer vegetable texture, you may need to extend the cooking duration.
- Make sure the water or stock in the removable cooking bowl does not reach the steaming basket.
- Water may need to be topped up in the bowl if steaming for longer periods.

DOs & DON'Ts

- Always thaw frozen meat and poultry before cooking.
- Trim all visible sinew from meat or poultry.
- Ensure that the food or liquid to be cooked fills half or more of the removable crockery bowl.
- On completion of cooking, if there is too much liquid remove the lid, press the Mode button once for the HIGH setting and cook for 35–40 minutes or until the liquid reduces.

DO'S

- Do ensure the removable crockery bowl is at room temperature when placing into the stainless-steel housing prior to cooking.
- Do avoid extreme temperature changes to the crockery bowl and glass lid. Handle the removable crockery bowl and glass lid with care.

- Do use dry oven mitts when lifting the removable crockery bowl containing hot liquids.
- Do place the removable crockery bowl onto a heat proof placemat once removed from the stainless-steel housing or when serving from the bowl.

DON'TS

- Don't place the removable crockery bowl or lid into or under cold water while the cooking bowl is still hot. Ensure both are handled with care.
- Do not use the removable crockery bowl or glass lid if chipped or cracked.
- Do not operate the slow cooker without the removable crockery bowl in position.
- Do not place the hot removable crockery bowl onto a wet surface.
- Do not cook with frozen meats or poultry.
- Do not place water or other liquids into the stainless-steel housing of the slow cooker.
- Do not immerse the stainless-steel housing, cord or plug of the slow cooker in water.
- Do not touch hot surfaces with bare hands.
- Do not reheat food in slow cooker.

CARE & CLEANING

Switch off at the power outlet and unplug from the power outlet. Allow all parts to cool completely before cleaning.

THE BOWL AND GLASS LID

- To remove stubborn, cooked–on foods in the removable bowl, soften by filling with warm, soapy water and allow to soak for 20–30 minutes. Remove by lightly scrubbing with a soft nylon kitchen brush.
- The removable bowl and glass lid can be washed in hot, soapy water using mild household detergent. Rinse and dry thoroughly. The removable bowl is dishwasher safe; however, care should be taken not to chip or crack the bowl.

THE STAINLESS STEEL HOUSING

The stainless steel housing can be wiped over with a soft, damp cloth and then dried thoroughly.

WARNINGS

- Do not immerse the housing or power cord in water or any other liquid as this may cause electrocution.
- Do not use chemicals, abrasive cleaners, steel wool, or metal scouring pads to clean the outside of the slow cooker housing or bowl as these can damaged the housing or the removable bowl.
- To prevent damage to the appliance, do not use alkaline cleaning agents when cleaning, use a soft cloth and mild detergent.
- Ensure all parts are completely dry before reassembling.

NOTE

The removable cooking bowl and glass lid are dishwasher safe.

STORAGE

Ensure the slow cooker is switched off, cooled and cleaned before storing. Place the cooking bowl into the slow cooker and replace the lid. Store upright in a cool dry place. Do not store anything on top of the cooking bowl and the glass lid.

Notes

Breville Service Centre

Australian Customers

Phone: 1300 139 798

Web: **www.breville.com**

New Zealand Customers

Phone: 0800 273 845

Web: **www.breville.com**

Breville®

Master Every Moment™

Breville, the Breville Logo, and EasySet are trademarks of Breville Pty Ltd ("Breville") and Breville's products are distributed in Australia and New Zealand under license.
Copyright Breville Pty. Ltd. 2026.

Due to continued product improvement, the products illustrated/photographed in this booklet may vary slightly from the actual product.

LSC460 ANZ – A26